



ELECTRONIC SAFE

25-YZY

USER MANUAL

OPENING YOUR SAFE FOR THE FIRST TIME

Upon first use, users should open the safe with the emergency key.

- Remove emergency lock cover, insert the emergency key, and turn it counterclockwise.
- Turn the knob clockwise to open the door.

CAUTION: Finish operation, pull the emergency key out and keep it in a safe place.

INSERTING THE BATTERIES

- Open the door with the emergency key
- Insert four AA batteries into the battery compartment.
- If red light is on when you open the door, it indicates the batteries are low and should be replaced.

FINGERPRINT REGISTRATION

- No fingerprint exist at first.
- With the door open, press the reset button. The light will on.
- Press your finger to the biometric scanner. Remove your finger when you hear a long beep. Registration completed.

CAUTION: Three beeps will be heard with unsuccessful registration. Repeat register again.

OPENING THE SAFE WITH YOUR FINGERPRINT

- Press the start button, the light will on.
- Press a previously-registered finger onto the scanner.
- You will hear a long beep and the green light will turn on. Rotate the knob clockwise within 6 seconds to open the door.

CAUTION: A wrong fingerprint input will activate 3 buzzer beeps and red light will on.

AUTOMATIC LOCK

5 continuous wrong inputs will activate the warning beep for 60 seconds. And the green light will on.

CAUTION: The keypad will be disabled during the beeping.

CLEAR REGISTERED FINGERPRINTS

Hold the reset button for 5 seconds with the green light flashes. You will hear a long beep. This indicates that all the registered fingerprints have been erased.

CLOSING DOOR

Turn the knob counterclockwise to close the door.