MANUAL SWEEPER GUIDE

Model 920F






Please make sure you read the instruction manual below and clear the operation before you use this sweeper.




SPECIFICATION

Working width with two side brushes	920 mm
Container Capacity	40L
Maximum Theoretical Area Performance	3680m²/h
Net weight	23.8 kg
Dimension (folded)	890x790x385 mm


SPARE PARTS IN THE BOX

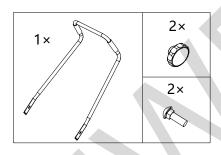

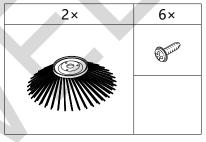


Handle and bolts


Side brush and screws

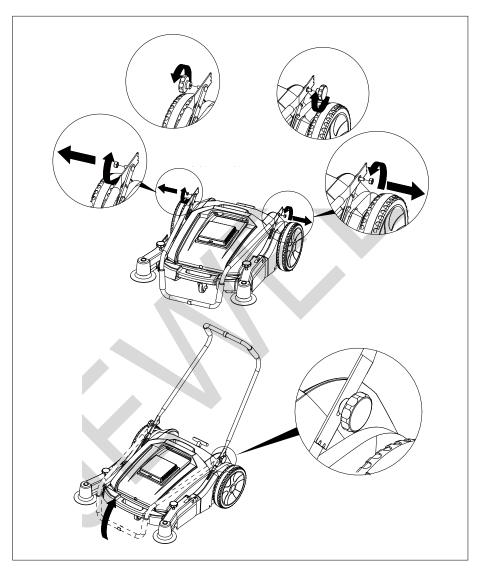


Retaining screw for push handle adjusting. Remove the screws on both sides of handle, and install the turning knob.

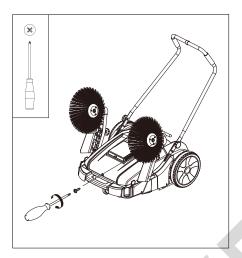

Take out the brushes from the debris container and screw the brushes.

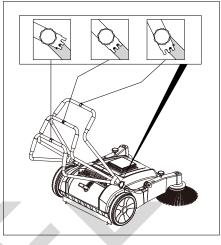


Three-position adjustable handle for operator comfort and convenience.

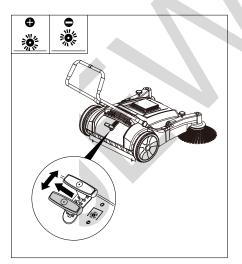


Adjustable roller broom height with 6 different positions.
Pull out the adjusting lever to the required position.




Easy to adjust front brush pressure for outstanding sweeping performance. Turn right to lower brush; turn left to lift brush.

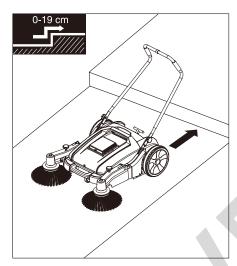


Walking the step in the opposite direction \leq 19cm.

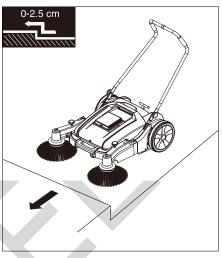


The cleaning surface should be competitive flat and height difference ≤ 2.5 cm.

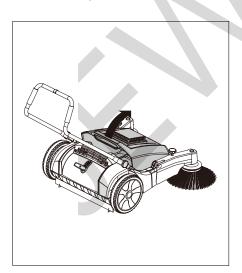


Lift the debris container handle and detach that.

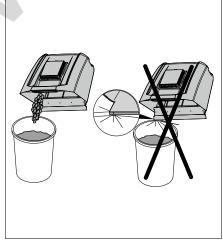


Pour the debris along one side. Crashing container is forbidden.

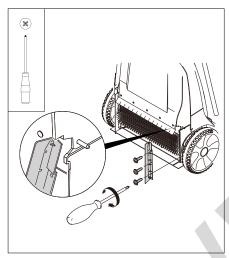


Set up the dustproof plates of both sides of main brush.

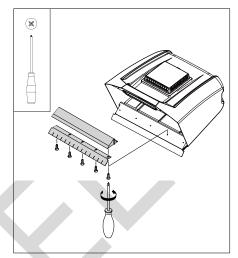

Install container seal baffle.

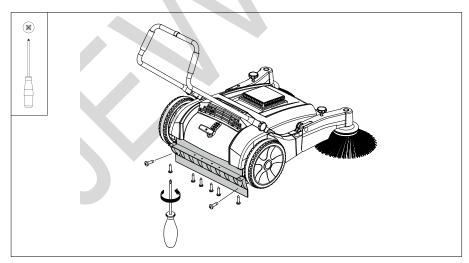


Install the dustproof plate on the back of main brush.

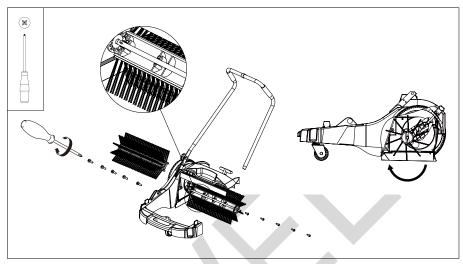

Main brush replacement:


To dismantle the main brush, unscrew all 6 retaining screws.

The two main brush half-shells can then be taken out.

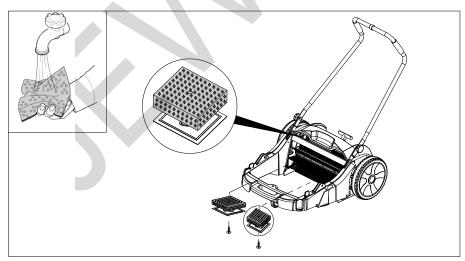


Fine filter clean and replacement:

Pull out the retaining pin and remove the fine filter for cleaning or replacement.

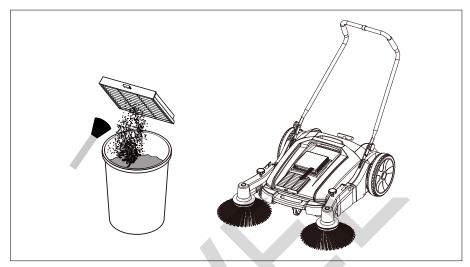


Cleaning the top filter by brush every month.

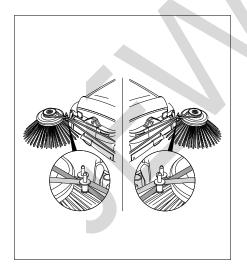

When installing the drive belt pay attention to the rotational direction of the side brush.

When moving forward, the side brush must rotate towards the inside.

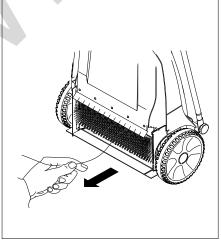

When the main brush is entangled in garbage, it should be taken out by reversing the roller brush.

