 


Amydor Digital Foil Printer-AMD360C User Manual

I. Appearance

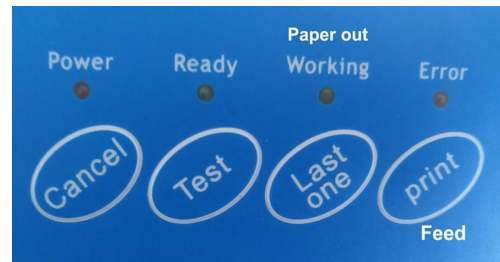

II. Technical Parameters

Model	AMD360C
Printing Method	Direct thermal or heat transfer method
Max printing Width	252 mm
Max feeding width	350mm
Software Operating Environment	Windows XP, Win 7, Win 8, Win 10
Interface	USB
Power Supply	AC110~240V, 50/60Hz
Max Power Consumption	400W
Packing size	64cm*48cm*36cm
GW/NW	25kg /19kg

Features:

- *China first digital for printer realize foil saving function.
- * Multi paper sheets feed in automatically at one time, accurate positioning make color register.
- * real USB output, performance is stable.
- * global design software Coreldraw output, convenient using.
- * using the best print head Japan Rohm ---- high precision thermal print head, high quality assurance.
- * The foil printer stores last file for next time offline printing. (Key of last one is copy function)

Note: key of Test is only for testing by manufacturer.

III. Operating guide.

1. Prepare work

- 1). Install the foil roll
- 2) Switching on power and connect printer with computer by USB cable.

 
2. Install printer driver on computer, suitable for Windows XP, Win 7, Win 8, Win 10, close the antivirus software temporarily will be helpful to install driver successfully. Switching on power and connect printer with computer by USB cable. Take a Windows XP system computer as an example:

1) find the printer driver progress interface as follow:




on the disk, double-click to start installing


2) choose language: Chinese or English

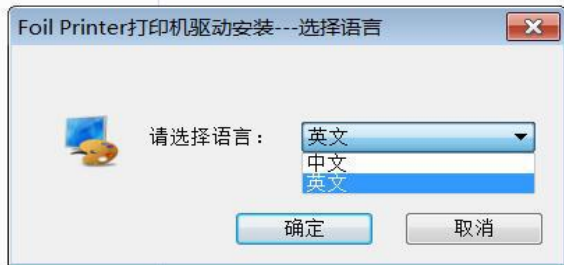

 3) Click the next, and it show as below:

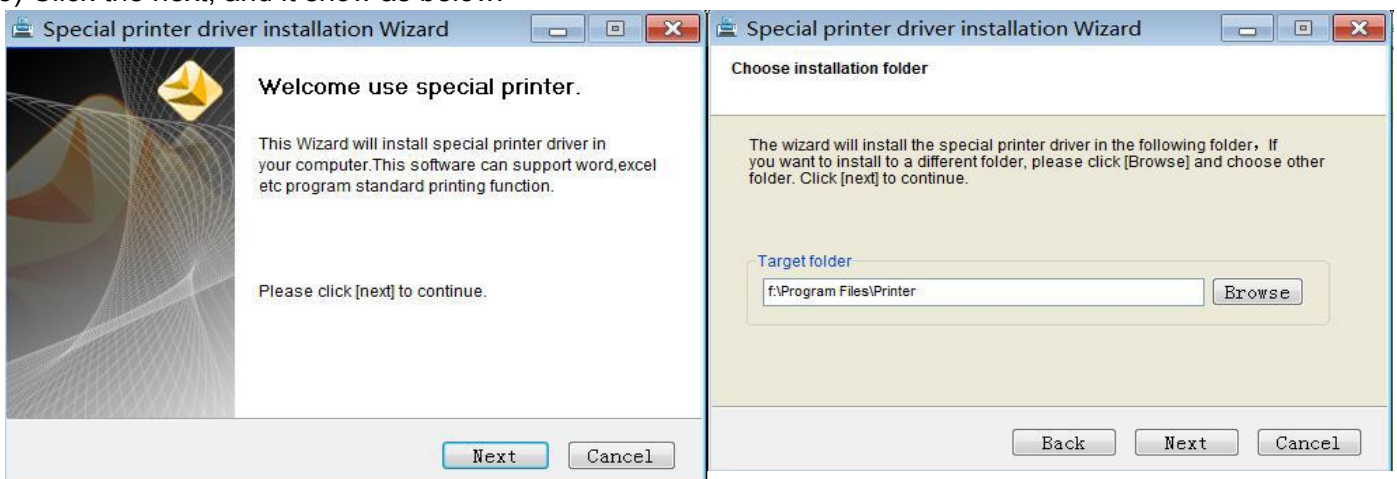

 4) Setup complete

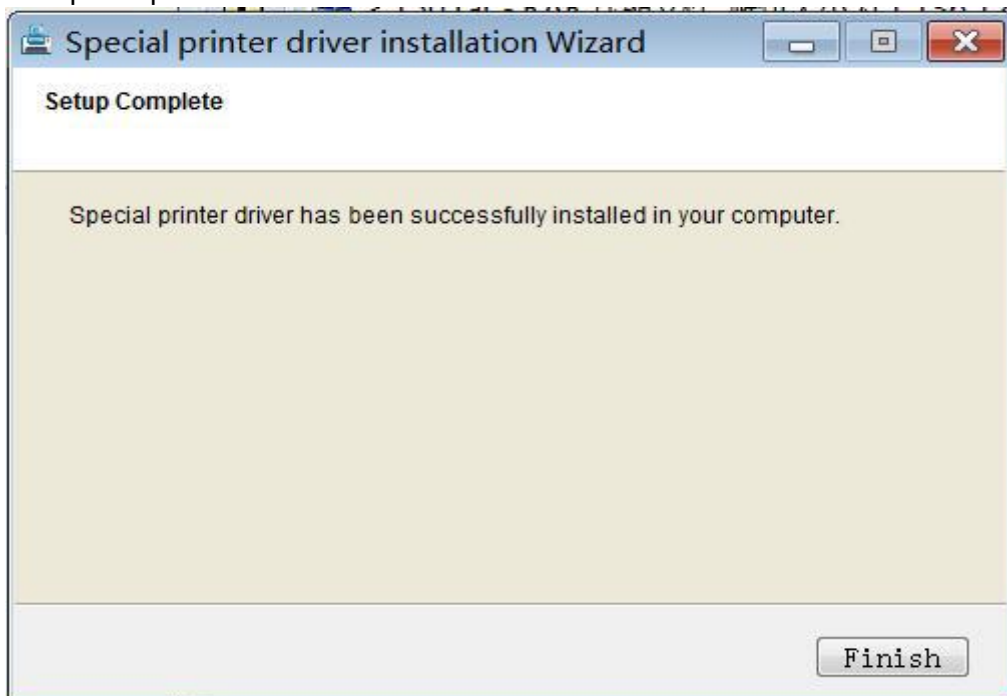


3. Design layout by Coreldraw, then print output.


Support all the global universal graphic design software, such as CorelDRAW, Adobe Illustrator, Adobe Photoshop, etc. Take CorelDRAW for example as follows:

1) Set page size 296*297mm (width is default)

 
set length according to the length of content you want to print. eg. we set 296*297mm.

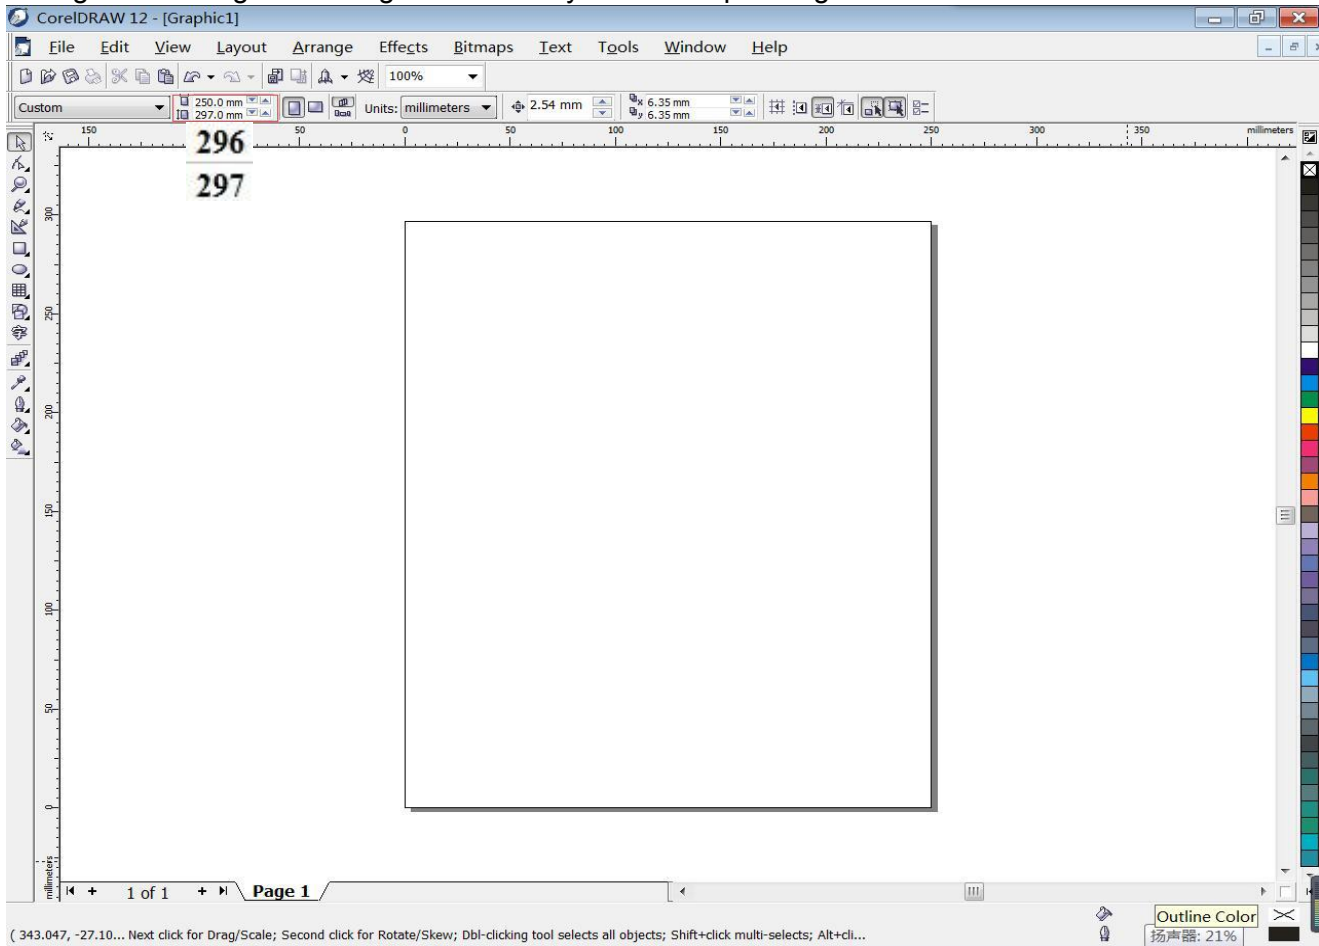

 
2) Use the text tool, and vertical tool to enter text and modify the font and size; words color must be black.

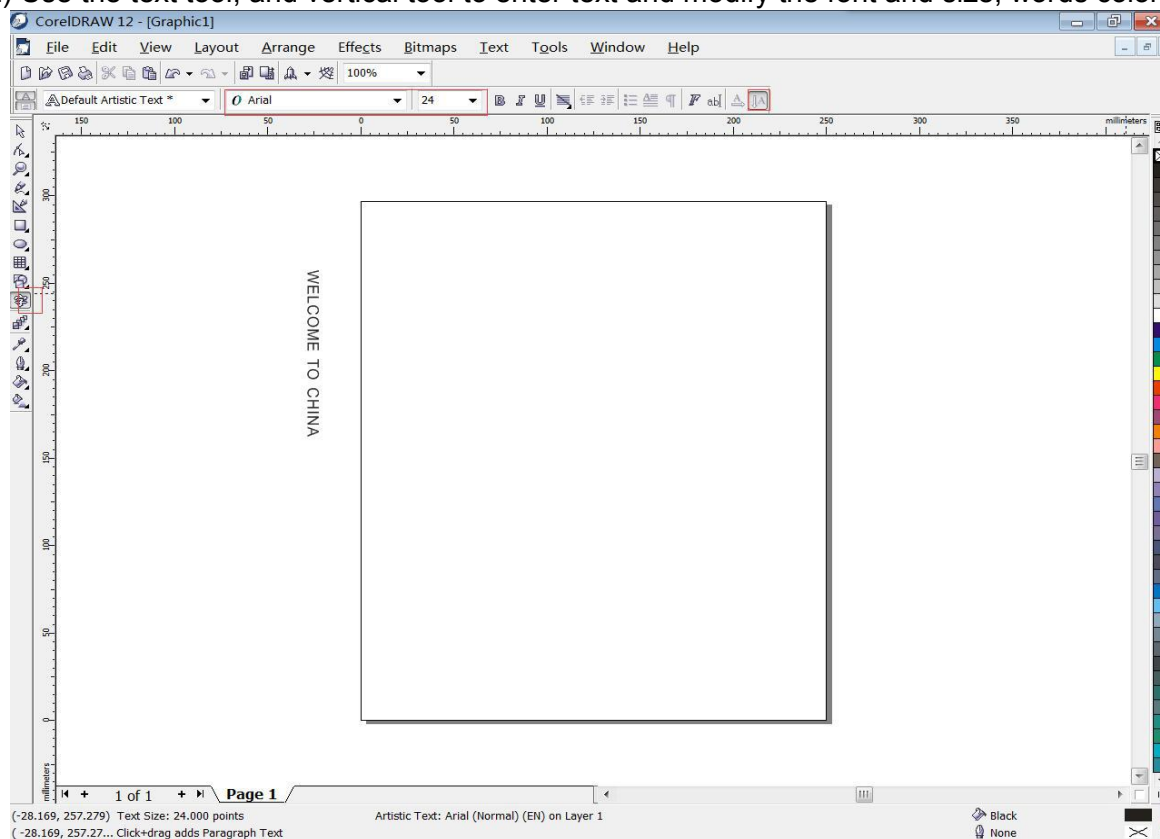

 3) Then click Arrange-Align & Distribute-Centered on the page to finish design layout.

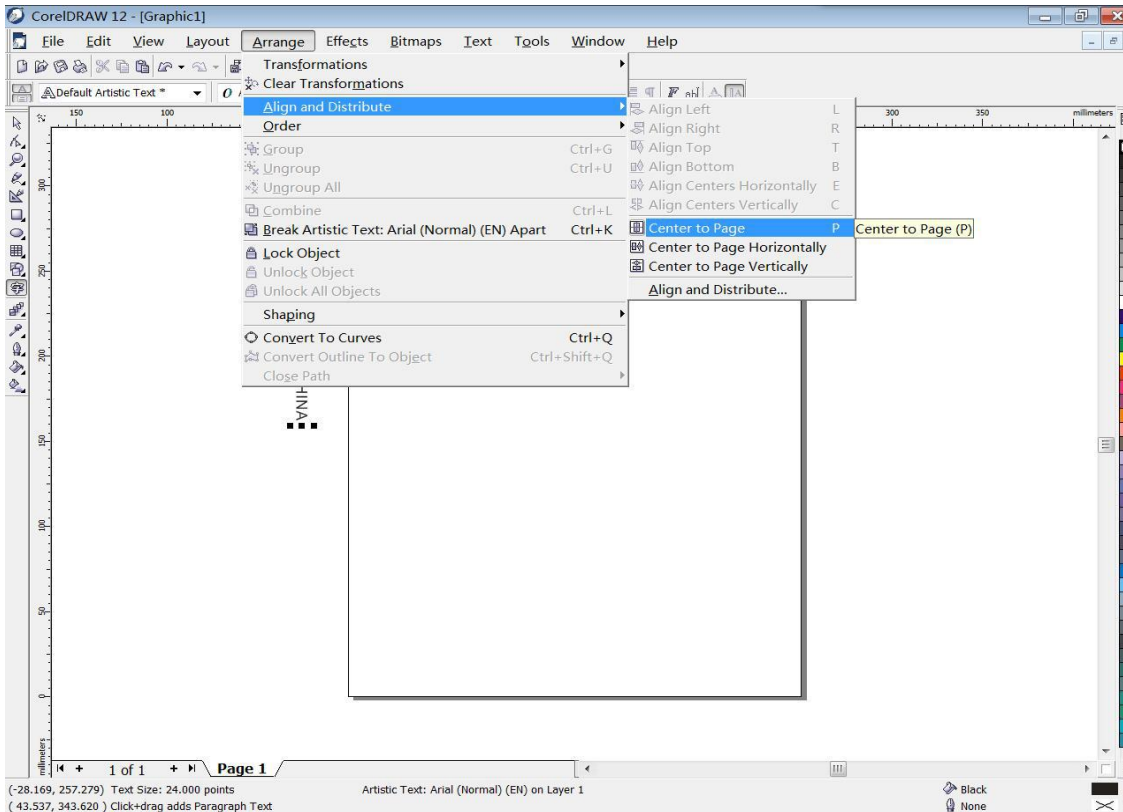


 4) Click print button, choose right driver-- foil printer, click properties, find Paper Source and choose Auto Source click advance

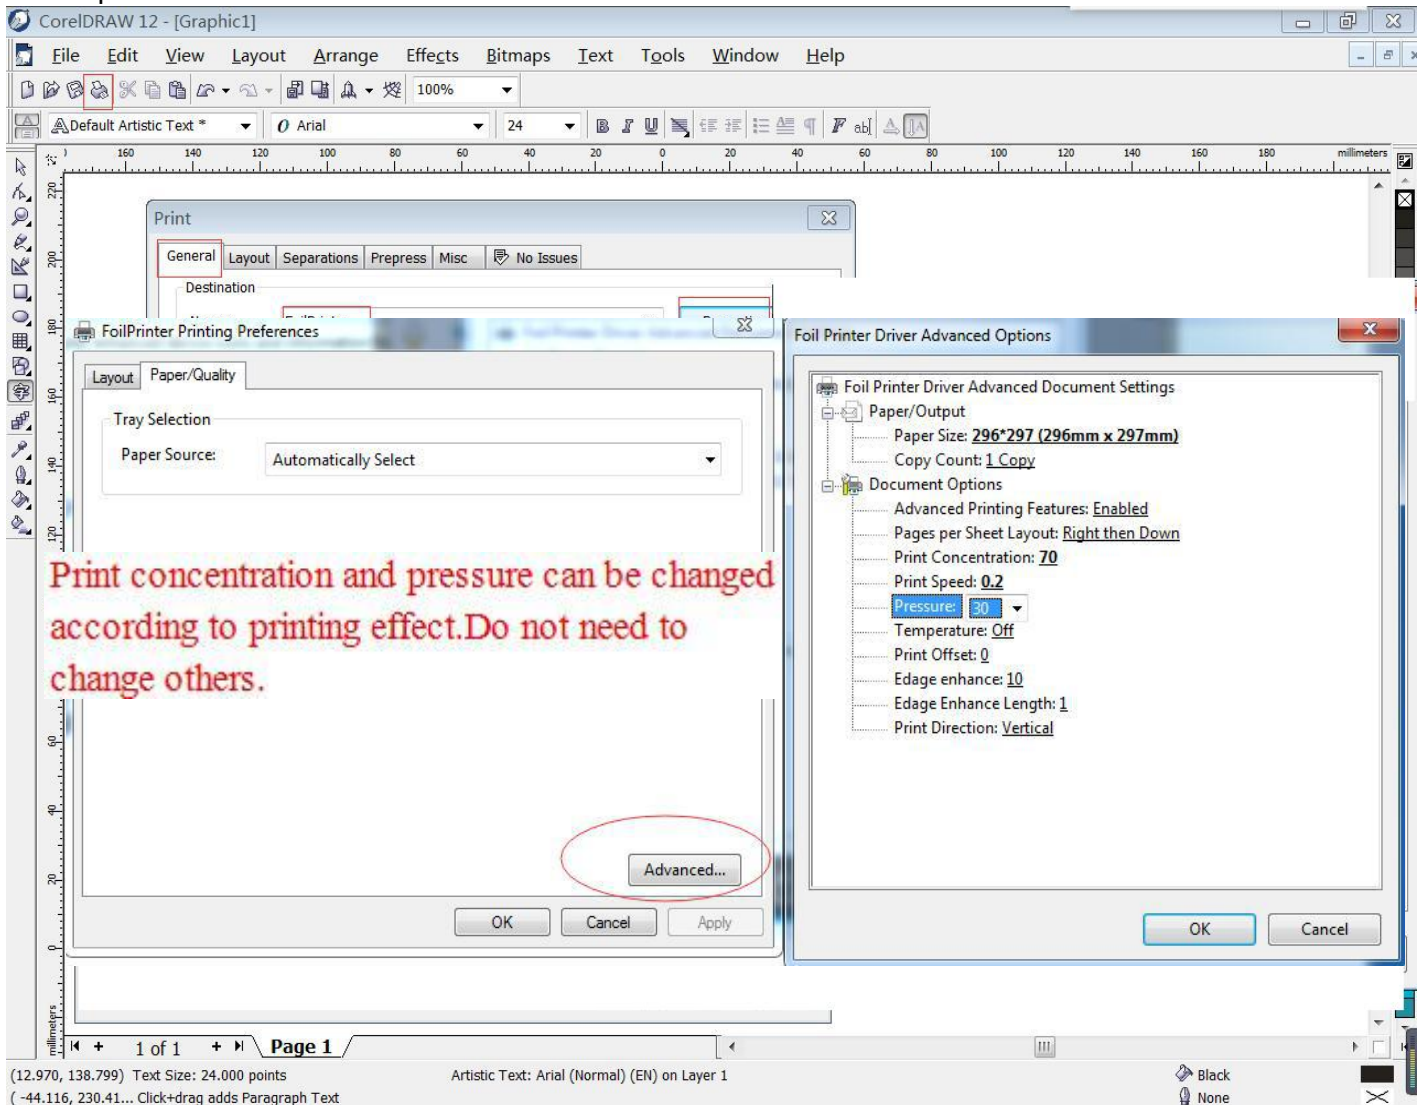

5) Set paper size, paper size must be set same with page size in coreldraw, **296mmx297mm**.

 Procedures are as follows:

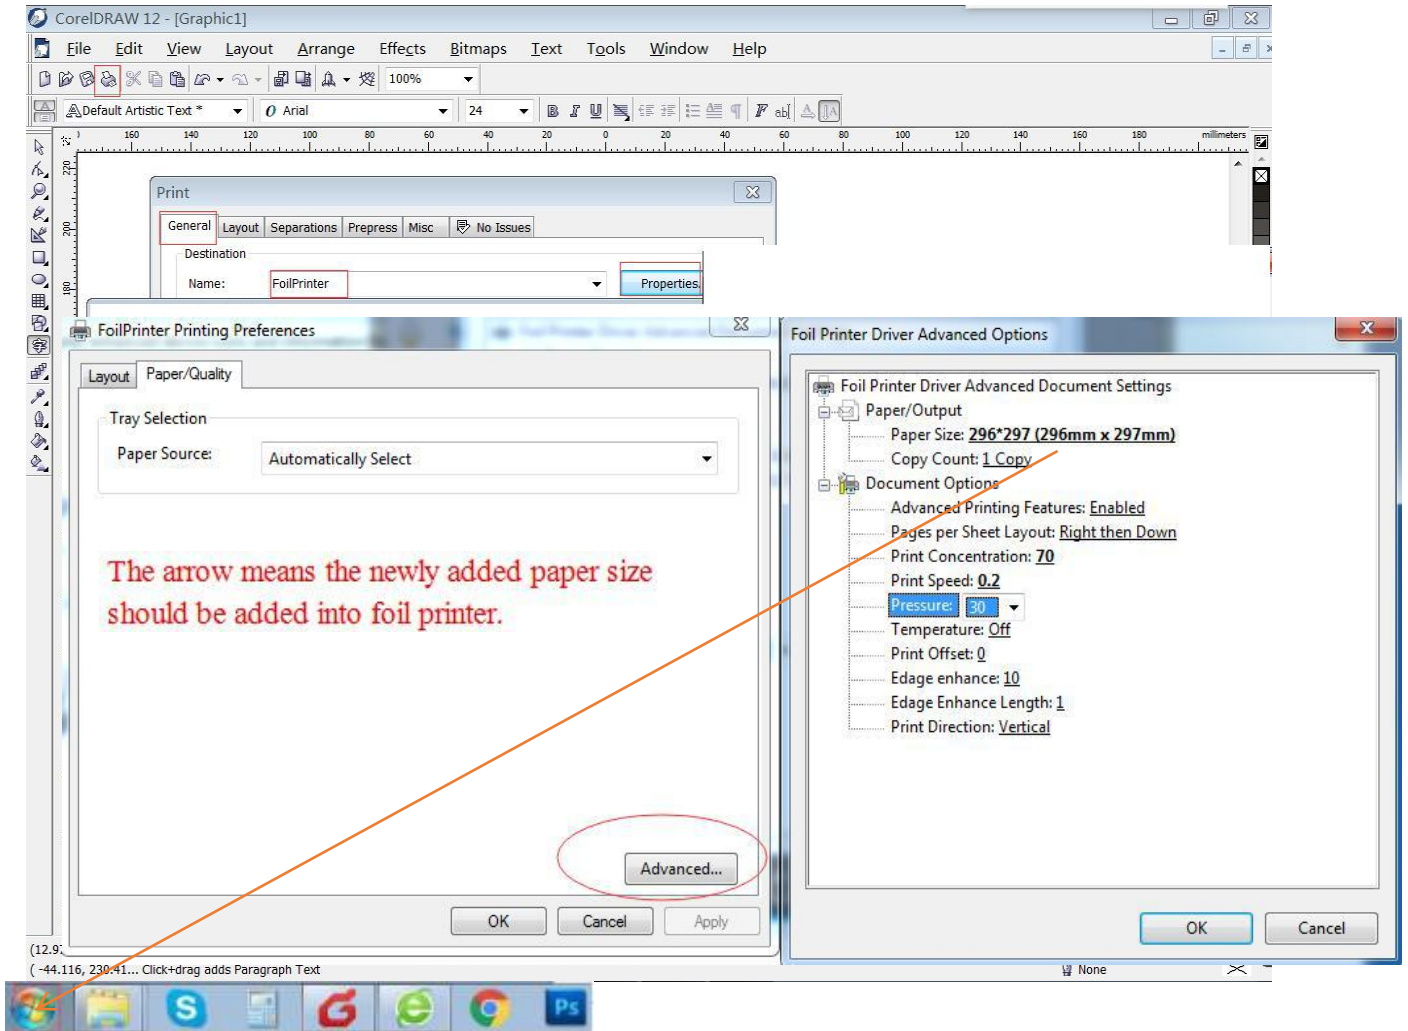

Click Start- find Devices and Printers



 
Click Devices and Printers, find Foil printer




Double-click foil printer, find Printer, click it and find Property



Choose Printer settings-Add-New Paper-296*297-296-297-OK

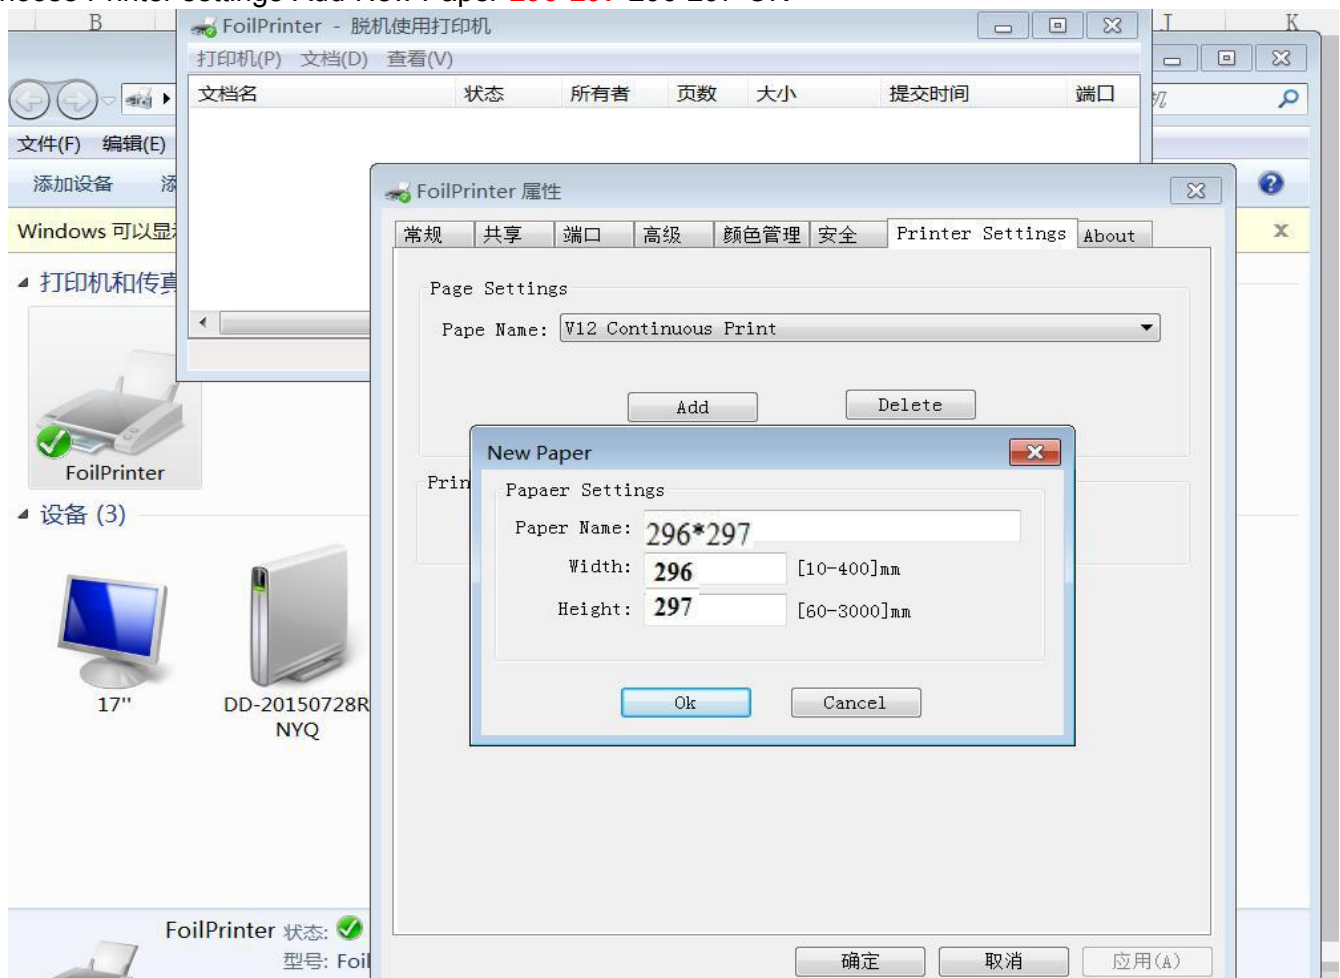

 6) Back to click property, then advance, then paper size choose **296*297mm**.

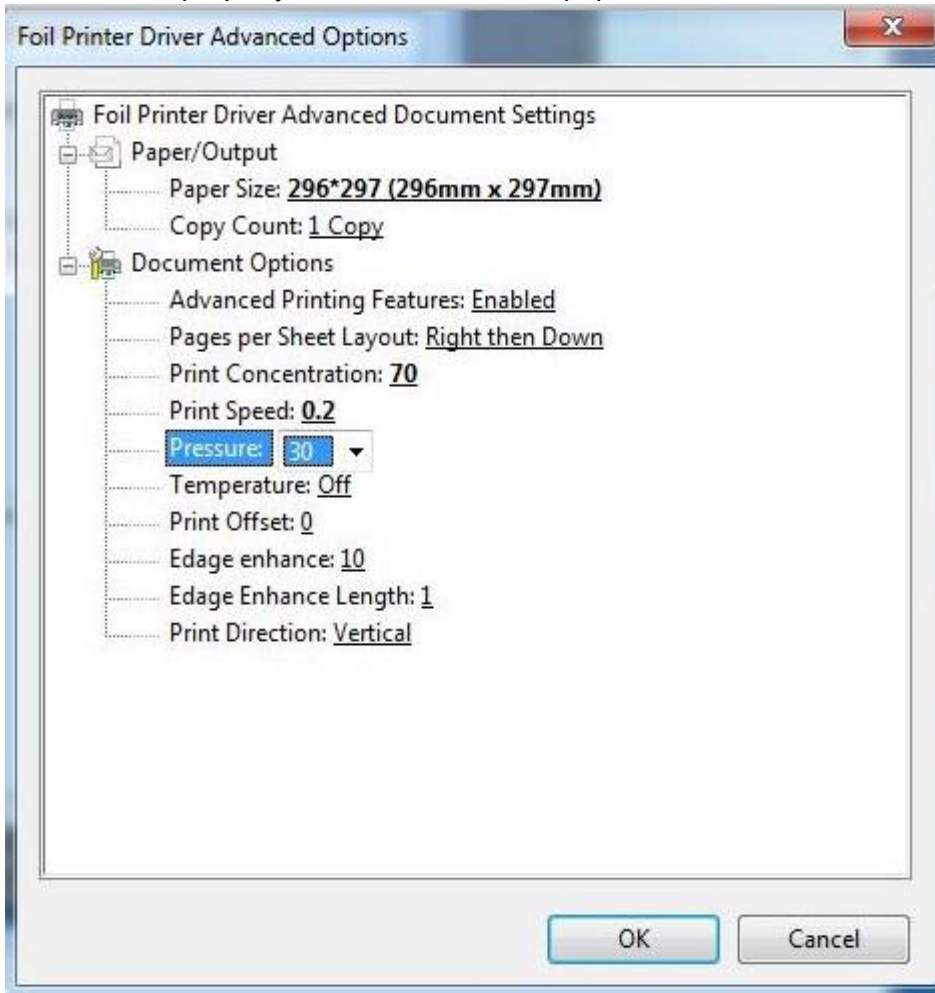


Okay, all print settings have been finished, then preview and print out.

8) After printer receives print command from computer, it has memory function.

If click the Last one button, then print/feed button, one copy of layout will be printed out.

 If click the Test button more than 3 seconds, more copies of layout will be printed out one by one continuously. If you want to stop, just click the **"Cancel"** button, the print job will stop.

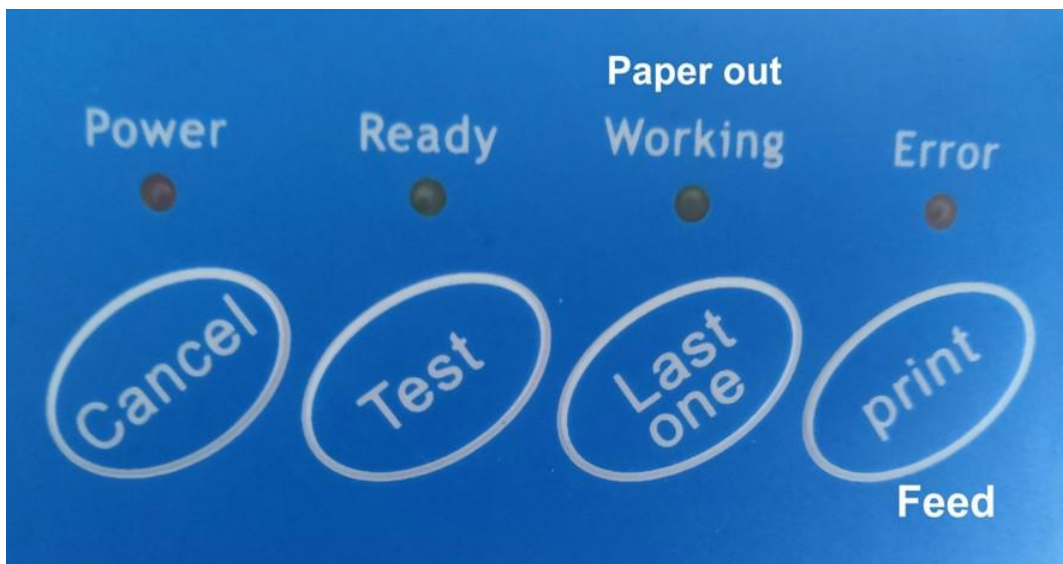

Note: If paper jammed, pull it out manually after switching off the power.