

Back Bar Cooler



User & Installation Guide

This guide contains instructions
for five models of
Back bar coolers

Contents

Product Overview	02
Installation	02
General operation	03
Controls	04
Cleaning,Care&Maintenance	04
Troubleshooting	05
End of life disposal	06

Product overview

Article Description
Hinged one door back bar cooler
Hinged two door back bar cooler
Hinged three door back bar cooler
Sliding two door back bar cooler
Sliding three door back bar cooler

Installation

Store the unit upright. If the unit has been stored or transported on its back, front or sides then it must be placed upright for at least an hour before switching on. Place the unit on an even floor as far away as possible from any source of heat.

Note: Do not move unit by lifting either the door or door handle as this may cause damage to the cabinet.

General Operation

The cabinet door should remain firmly closed during normal operation. This prevents warm moist air entering and creating frost within the cabinet. If the cabinet is left open for extended periods ice will form. This will prevent cooling and the machine will then require defrosting.

The unit should be left switched on, and should not be switched off between trading sessions. The unit is designed to operate in an ambient temperature range of 42.8°F-77°F, however for short periods of time (up to 8 hours) the unit will operate normally at 89.6°F. The cabinet is designed to chill product in sealed containers only i.e. bottles, cans etc. It is not recommended that glasses of drink or similar are placed in the unit for cooling.

Cleaning, Care & Maintenance

Routine maintenance

Disconnect from the power supply before cleaning.

- Clean the enclosure and interior of the cabinet as often as possible.
- Clean the unit with moist cloth. Never allow the switch, control panel, cable or plug to get wet.
- Do not use abrasive cleaning agents. These can leave harmful residues.
- Use only mild soapy water.
- Clean the door seal with water only.
- Ensure that no cleaning water penetrates into the electrical components.
- Must not be cleaned by a water jet.
- Always wipe dry after cleaning with soft cloth.
- Take care when cleaning the rear of the cabinet.
- An agent or qualified technician must carry out repairs if required.
- If the cabinet is to be left inactive for long periods, unplug the cabinet after having turned the lamp switch to off position, empty the refrigerating compartment and clean thoroughly.

Special maintenance

The instructions given in the following paragraph are for SKILLED PERSON.

Periodic Operations

- Periodically clean the condenser using suitable tools (vacuum cleaner or soft brush).
- Check that the electrical connection are not loose.
- Check that the thermostat and the sensor are in proper working order.
- Periodically cleaning the condenser can extend the life of the appliance.
- Failure to keep the condenser clean will reduce the refrigeration performance of the cabinet.
- Recommend that an agent or qualified technician clean the condenser.

Troubleshooting

If your appliance develops a fault, please check the following table.

Fault	Probable Cause	Action
The appliance is not working	The unit is not switched on	Check the unit is plugged in correctly
	Plug and lead are damaged	Call your agent or qualified technician
	Fuse in the plug has blown	Replace the fuse (UK Plug)
	Power supply	Check power supply
	Internal wiring fault	Call your agent or qualified technician
The appliance turns on, but the temperature is too high/ low	Too much ice on the evaporator	Defrost the appliance
	Condenser blocked with dust	Call your agent or qualified technician
	Doors are not properly	Check doors are shut and seals are not damaged
	Appliance is located near a heat source or air flow to the condenser is being interrupted	Move the refrigerator to a more suitable location
	Ambient temperature is too high	Increase ventilation or move appliance to a cooler position
The appliance is unusually loud	Appliance is overloaded	Reduce the amount of containers in the appliance
	Loose nut/ screw	Check and tighten all nuts and screws
	The appliance has not been installed in a level or stable position	Check installation position and change if necessary
The appliance is leaking water	The appliance is not properly leveled	Adjust the screw feet to level the appliance
	The discharge outlet is blocked	Clear the discharge outlet
	The water container is damaged	Call your agent or qualified technician

End of life disposal

Environmental Protection



Discarded electric appliance are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centres (if available)

Guarantee

A statutory guarantee applies for this product.

Claim must be submitted immediately after their determination.

The right to guarantee claims expires upon any intervention of the purchaser or third parties. Damages caused by wrong treatment or operation, by false placement or storage, improper connection or installation, as well as force or other external influences are not covered by this guarantee. We recommend careful reading of the operating instructions as it contains important information.

The purchaser must prove the right to guarantee claims by presentation of the purchase receipt.

Note:

1. In case this product does not function correctly, please firstly check if there are other reasons, e.g. interruption of the power supply, or incorrect handling are the cause.
2. Please note the following documents need to be submitted together with your faulty product:
 - Purchase receipt
 - Model description/ Type/ Brand
 - Describe the fault and problem as detailed as possible

In the case of a claim for guarantee or defects, please contact the seller personally.