Machine Moving Equipment

HS-4A/HS-8A/HS-12A Operating instructions



WARNING: Read carefully and understand all ASSEMBLY AND OPERATION INSTRUCTIONS before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

ACAUTION

- Always use the correct equipment to load the skate such as toe jacks.
- When loading the skate set make sure the load is distributed in such away that each individual skate is not overloaded.
- Make sure the load will not tip over from the skate.
- Make sure the load is not unstable on the skate and avoid any risk of the load tipping over or falling from the skate.
- When moving loads on a floor that has a slope make sure you have means of controlling the movement of the load once it starts moving.
- Always insure the floor is clean and free from any items that could damage the wheels of the skates.

Maintenance


- Inspect the skates on a regular basis and before use to insure they are in a safe to use condition.
- Keep the wheels clean and remove any metal items that have become in bedded in the wheels.
- Lubricate the wheels to allow the skates to continue to move freely making moving the load easier.

Personal protection

- Always wear safety boots when moving heavy loads.
- Do not put feet or hands under the load once it is placed on the skates.
- When moving the load on the skate always insure that there is no risk of any person becoming trapped by the moving load.


Technical Specifications									
Model No.	No.of wheels	Dimensions of	Length of Handle	Overall Dimensions	Capacity	Net Weight			
		turn plate (in.)	(in.)	L×W×H (in.)	(lb.)	(lb.)			
HS-4A	4	5-29/32	39-61/64	16-17/32 × 10-35/64 × 4-9/16	13,200	75			
HS-8A	8	6-19/64	51-3/16	23-55/64 x 19-7/32 x 4-9/16	26,400	125			
HS-12A	12	7-3/32	51-3/16	33-55/64 x 21-29/64 x 4-9/16	39,600	143			

Exploded figures of HS-4A and parts list

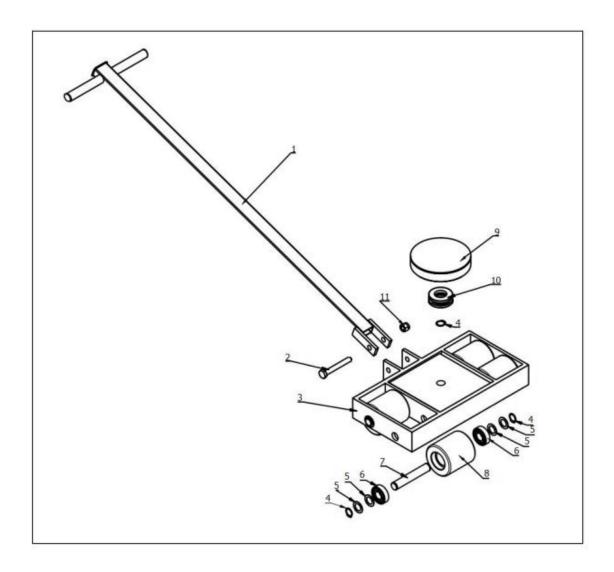


No. Description		Quantity	
1	Handle	1	
2	Bolt	1	
3	Frame	1	
4	Retaining Ring	9	
5	Washer	16	
6	Bearing	8	
7	Axle	4	
8	Wheel	4	
9	Crest Plank Arts	1	
10	Bearing	1	
11	Nut	1	

Exploded figures of HS-8A and parts list

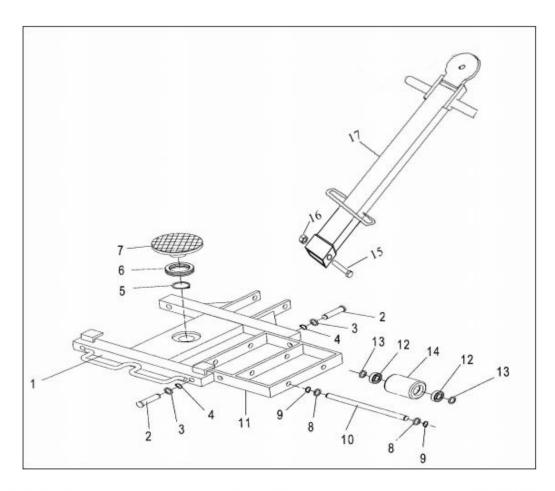

No. Description		Quantity	
1	Frame	1	
2	Shaft	4	
3	Washer	4	
4	Retaining Ring	4	
5	Retaining Ring	1	
6	Bearing	1	
7	Crest Plank Arts	1	
8	Washer	8	
9	Retaining Ring	8	
10	Axle	4	
11	Frame of Roller	2	
12	Bearing	16	
13	Washer	16	
14	Wheel	8	
15	Bolt	1	
16	Nut	1	
17	Handle	1	

Exploded figures of HS-12A and parts list

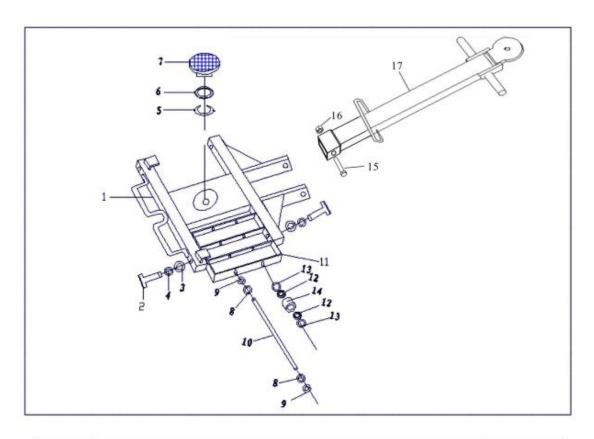

No.	o. Description	
1	Frame	1
2	Shaft	4
3	Washer	4
4	Retaining Ring	4
5	Retaining Ring	1
6	Bearing	1
7	Crest Plank Arts	1
8	Washer	8
9	Retaining Ring	8
10	Axle	4
11	Frame of Roller	2
12	Bearing	24
13	Washer	24
14	Wheel	12
15	Bolt	1
16	Nut	1
17	Handle	1