


Instructions



For preventing the loadcell from being damaged during transportation, there are four protection screws in the middle of the scale, please adjust the four screws before using after receiving the goods, or the scale can't be used for weighing.

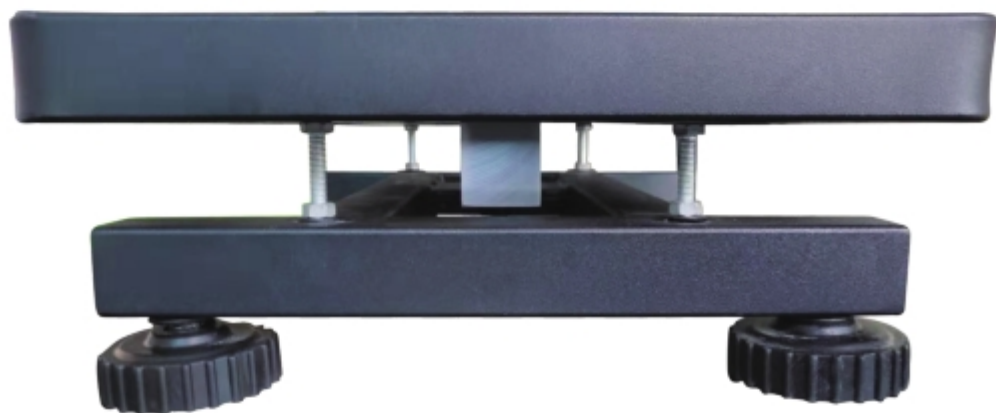

①

Protection function during transportation



②

Please adjust the four screws before using