

INSTALLATION INSTRUCTION FOR SALAMANDER BOILER

1. Lift the Salamander boiler with manual forklift.



2. Lift the Salamander boiler and let the back support beam come through the range back support beam.



3. Screw the 12 screw holes with self tapping screw.

