


Instruction Manual

(NH serial)

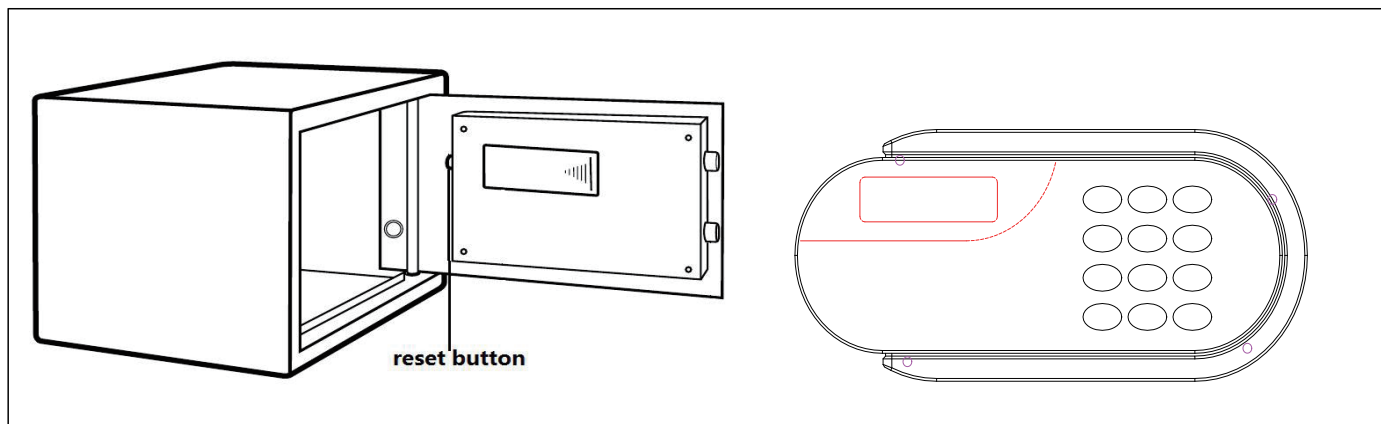

➤ Dear valued customer:

Thank you for choosing our products! You have taken an important step in organizing and protecting your most valued possessions. Every series of our safes is professionally made and designed to provide safety. Please take time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.

➤ Initial Use

- ① Find the emergency keys in the accessories' bag;
- ② Remove the emergency lock cover;
- ③ Insert the emergency key, press gently and turn it count clockwise to open the door;

CAUTION: The preset user code "1234". Preset master code "011223".

Finish operation, pull out the emergency key and keep it in a safe place.

➤ Insert the batteries

- ① With the door open;
- ② Insert 4×1.5V batteries into the battery box;

CAUTION: Replace 4 fresh batteries by lining them up in a manner as indicated by the "+" and "-" signs.

➤ Open/Close the door

- ① Use user code or master code to open the door;
- ② Under this mode, you need to input code to close the door;

➤ Set the user code

- ① With the door unlocked, input your new code;
- ② Press "#" to confirm the code;

➤ Set the master code

- ① With the door unlocked, press "*" twice, it will display "PROG";
- ② Within 5 seconds after "PROG" disappear, input original master code, the preset master code is "011223", it will display "NEW";
- ③ Within 5 seconds after "NEW" disappear, input your new master code, it will display "AGAIN";
- ④ Input your new set code again;

CAUTION: “DONE” means the new set code is confirmed, “ERROR” means the setup failed;
The master code can not be the same as function code;

➤ Automatically locked

- ① Four continuously wrong entries the system will lock up automatically;

CAUTION: You can only open the door with emergency keys.

➤ Security display feature

Set the hidden function in programming mode;

- ① Press “*” to activate the hidden function and this function will last 5 seconds;
- ② After input code once, this function will be invalidated;


➤ Battery Power Test

- ① Press “#” to actuate the battery power test;
- ② If it display “BA-HI”, it means the battery power is normal;
- ③ If it display “BA-LO”, it means the battery voltage is low and must be replaced;

➤ Error indication

- ① ERROR-----the code is incorrect;
- ② ERROR1-----the door can not open normally. Please push the door slightly to loosen the bolt;
- ③ ERROR2-----the door can not close normally. Please push the door slightly to close the door;

➤ Mounting

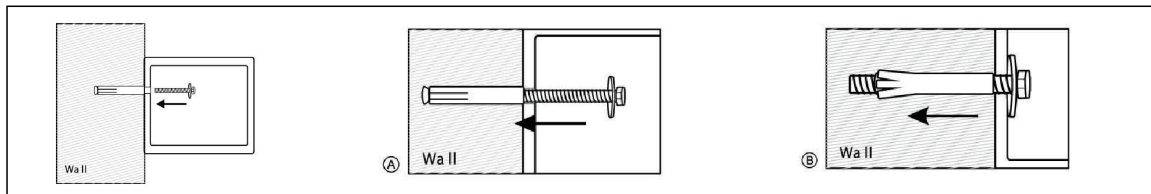

- ① Drill holes for expansion bolts(or clamping screws) in the right place;
- ② Turn the expansion bolts counter clockwise to separate;
- ③ Use the expansion bolts(or clamping screws) to secure the case to the wall;
- ④ Make sure the case is mounted in place as required and then tighten all screws.

CAUTION: Use the expansion bolt when there is a concrete wall surface.

Use the clamping screw when there is a wooden wall surface.