

Sleeping (Power Saving) Mode

When the machine doesn't work for 5 minutes, LCD screen backlight will be extinguished, it will enter sleeping mode in order to save power. The machine can be waken up and return to working mode by touching any key.

EXTERNAL PORT(OPTION)


If the printer is connected, you can print report of the counting result by pressing "PRINTER" key.



WARNING

- Do not open the back cover when the machine is working.
- Do not start the machine when the back cover is open.
- Do not put your fingers inside the hopper or channel when the machine is under operation.

Auto Coin Counter Operation Instruction

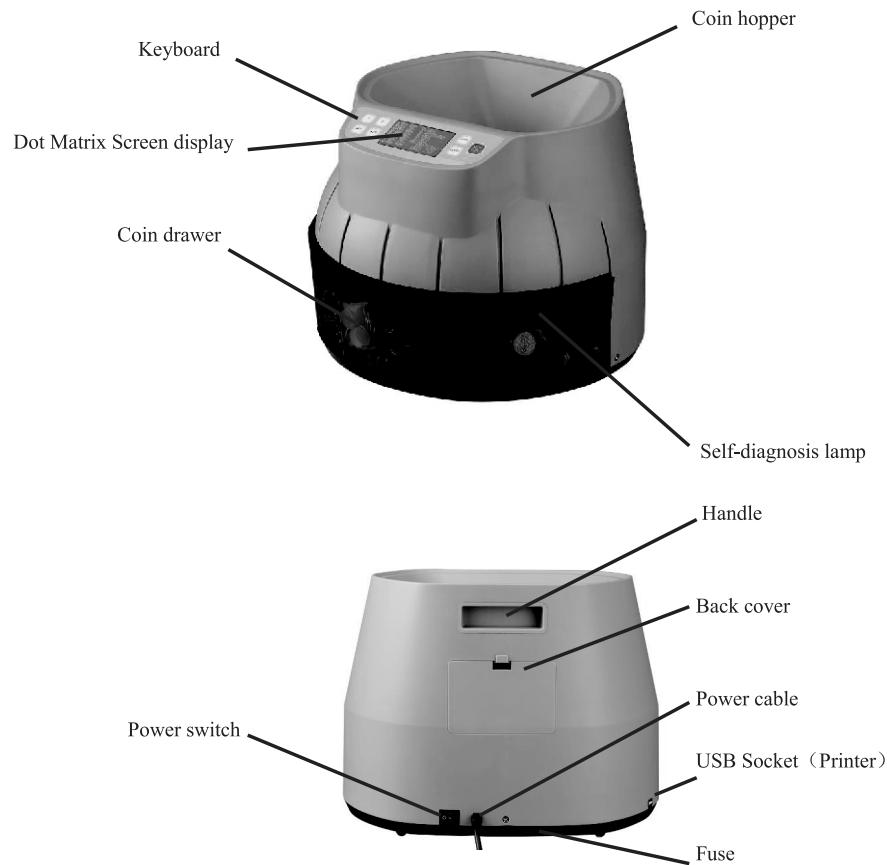

NAMES AND FUNCTIONS OF KEYS:

1. "SET" Key
Press this key to enter into SET Mode
Press this key to choose up and down for SET
2. "BAT " Key
Short press this key, the batch numbers increase 10 units and 20 units.
Long press this key, the batch numbers increase continuously 10 units to 20 units
3. "+"Key
At the SET mode, short press this key, the number increases 1 unit
At the SET mode, long press this key, the number increases continuously 1 unit
At the counting mode, press this key to choose up the counting result which needs to clear
4. "-" Key
At the SET mode, short press this key, the number decreases 1 unit
At the SET mode, long press this key, the number decreases continuously 1 unit
At the counting mode, press this key to choose down the counting result which needs to clear
5. CLEAR
Short press this key to remove the individual set
Short press this key to remove the individual counting result (clear the flashing individual result after pressing the key "+" or "-") .
Long press this key to remove all the set or all the counting result.
It is invalid to press this key when the machine is working.
6. PRINTER
Press this key to print
7. START/STOP
Used to start counting or stop counting

SPECIFICATIONS:

- ◆ Ambient temperature-----°C~40°C
- ◆ Power source-----AC220V/ 50Hz□
AC110V/ 60 Hz□
- ◆ Power consumption-----<45W
- ◆ Hopper capacity-----MAX.1100units -
- ◆ Each coin drawer-----120-450units
- ◆ Sorting speed-----315--345units/min
- ◆ Optional accessories-----Printer, External display
- ◆ Dimension:-----360mmx340mmx282mm
- ◆ Net weight: -----4.22kg

INDICATIONS OF ERRORS

Error Code	Meaning	Remedy
E1-E8	Counting sensor error	Replace the counting sensor corresponding to the red indicator light
E9	Detecting sensor error or have a coin in the machine	Clear the glass cover or replace the sensor or take out the coin
E10	Motor detecting sensor error	Adjust the two motor detecting sensor to in a line or replace them