
SH Series Instruction Manual

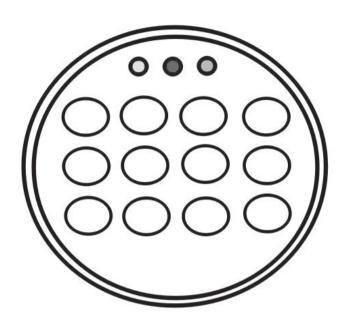

> Dear valued customer:

Thank you for choosing our products! You have taken an important step in organizing and protecting your most valued possessions. Every series of our safes is professionally made and designed to provide safety. Please take time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.

Dear valued customer:

Thank you for choosing our products! You have taken an important step in organizing and protecting your most valued possessions. Every series of our safes is professionally made and designed to provide safety. Please take time to read and familiarize yourself with the proper operating procedures of your new safe presented on the following pages.

Initial Use

- 1) Find the emergency keys in the accessories' bag;
- ② Remove the emergency lock cover;
- Insert the emergency key, press gently and turn it anticlockwise, clockwise turn the housing at the same time to open the door;

CAUTION: Finish operation, pull out the emergency key and keep it in a safe place.

Insert the batteries

- With the door open, insert 4×1.5V batteries into the battery box;
- ② If red light is on, it means the voltage is low and you should replace batteries.

CAUTION: Replace 4 fresh batteries by lining them up in a manner as indicated by the "+" and "-" signs.

Open the door

- ① Input your user code or master code(both are 3 to 8 digits), each pressing results one buzzer beep;
- 2 Press "#" button, the green light will be on;

Rotate the housing clockwise and pull outwards within 5 seconds, the door will be open;

CAUTION: The preset user code "159". There is no preset master code.

Please input the user code again if the yellow light flashes.

Close the door

Turn the housing anticlockwise to close the door.

Lockout

- ① Three continuously wrong entries will activate the warning beep for 20 seconds and lockout;
- ② Another three continuously wrong entries will activate the warning beep for 5 minutes and lockout.

CAUTION: You can stop the beeps by opening the safe with emergency key, and then power-cut by removing the battery.

 
Set the user code

- ① With the door unlocked, press the reset button, start setting code when the yellow light is on;
- ② Input new user code(3 to 8 digits) and then press "#" button, it will be confirmed with yellow light flash twice;
- ③ If the yellow light flashes with 3 buzzer beeps, it means the setting is invalid, and you need to try again.

> Set the master code

- ① With the door unlocked, input "00" and press reset button, start setting code when the yellow light is on;
- 2 Input new master code(3 to 8 digits) and then press "#" button, it will be confirmed with yellow light flash three times;

Mounting

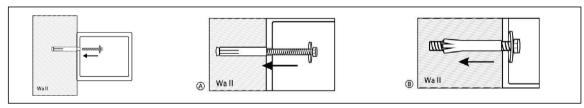

- ① Drill holes for expansion bolts(or clamping screws) in the right place;
- Use the expansion bolts(or clamping screws) to secure the safe to the wall or on the floor;
- ③ Make sure the safe is mounted in place as required and then tighten all bolts(screws).

CAUTION: Use the expansion bolt when there is a concrete wall surface.

Use the clamping screw when there is a wooden wall surface.