

# 310M Paper Cutter



# **Operation Manual**

※Please read this manual carefully before operating the machine.

Revision: <u>27/04/2</u>1

Sysform Sysform

S/Sform G

5/Sform

S/Sform

S/Sform

SISIOIM

S/Sform

Table of Contents
1. Safety & Warning 1
1.1 Safety Rules 1
1.2 Precautions1
1.3 Do's And Don'ts 1
1.4 Safe Transport2
2. Unboxing
3. Installation
4. Description of Parts
5. Operation 3
6. Maintenance - for trained staff only!
6.1 Blade Replacement3~4
6.2 Cutting Stick Replacement 4
7. Troubleshooting

# 1. Safety & Warning

#### 1.1 Safety Rules

The machine has blade lock which make it a safe to operate. Regardless of your experience, safety instructions must be read carefully, completely understood, and applied to your daily work habits. If you do not understand or are confused by certain safety instructions presented in this manual, discuss them with your supervisor. Machine setup, cleanup, and maintenance operation will vary. Therefore, it is essential for all users to practice safe work habits. SAFE WORK HABITS PREVENT INJURIES. The main rule to follow is to ALWAYS make sure the blade is locked when performing setup, cleanup, adjustment and maintenance operations. The safety precautions in this manual provide guidelines for the protection and for that of fellow workers.

#### 1.2 Precautions

Before any maintenance is performed on the machine, switch off all sources of electrical; do not operate the equipment when locks are not in place. Failure to observe this warning could result in personal injury.

#### 1.3 Do's And Don'ts

(1) Warning: do not reach beneath the blade and clamp!

DO	DO NOT
1. Read and understand this manual before attempting to operate or service the machine.	1. Do not attempt to operate or service the machine without reading and understanding this manual.
2. Be familiar with the machine safety rules and practices.	2. Do not remove the safety devices.
3. Warn others of an intended action that may endanger them.	3. Do not clean or lubricate moving parts of a machine that is running.
4. Perform lubrication and oiling of the machine only when power is off.	4. Do not let unauthorized persons to operate the machinery.
5. Verify that all guards are installed before operating the machine.	5. Do not place tools on a machine that is running.
6. When working on electrical equipment, power must be shut off to all circuits before any work is attempted. Individual switches must be opened and the equipment circuits must be tested to make sure there is no power.	6. Do not reach into the machine to make adjustments while it is running.
7. Be sure all operators are aware of all areas and operations that require extra safety measures.	7. Do not allow horseplay in the work area.

# 1. Safety & Warning (Continued)

#### 1.4 Safe Transport

1.4.1 For a short transport (few meters): Though this is a small machine, we suggest that two persons lift up the machine together carefully and move it to another place.

1.4.2 For more than a few meters: The machine should be packed again in the orginal packaging.



## 2. Unboxing

Cut the tapes and packing belts outside the box. Cut off the cable tie around the bag and place the machine on a steady and strong working table.




#### 3. Installation

Install two AA batteries into the battery holder located at the back of the machine according to the indication of the positive and negative electrodes.



## 4. Description of Parts

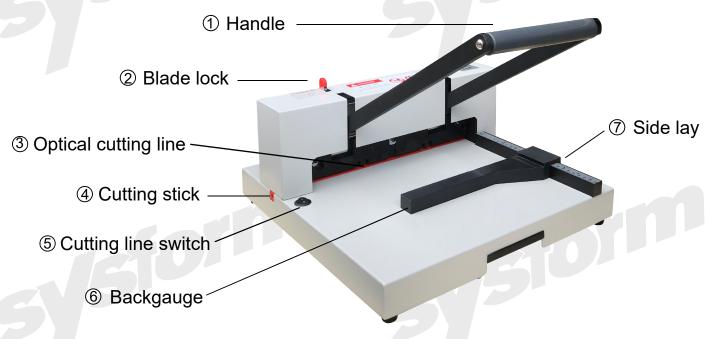

# 5. Operation

Switch on ⑤ Cutting line switch. The cutting line appears.

Adjust 6 Backgauge to the required position.

Push ② Blade lock and press ① Handle down to cut the paper sheet.


Rlease the handle and make sure it is locked by the blade lock.

Take out the paper sheet carefully.


① Warning: do not reach beneath the blade and clamp!

## 6. Maintenance - for trained staff only!

- 6.1 Blade Replacement switch off cutting line and put on gloves. Follow below steps.
- Warning: do not reach beneath the blade and clamp!

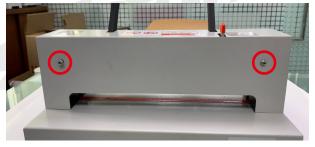

6.1.1 Remove two screws on the back of the machine top cover using an allen wrench.

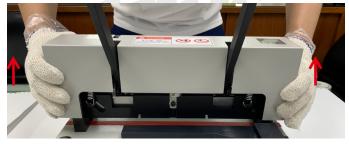

6.1.2 Remove the top cover carefully.




6.1.3 Pull up and turn over two handles to release two springs on the sides of the machine.

(1) Warning: DO NOT reach beneath the blade and clamp!



6.1.4 Push the blade lock and press the knife down. Remove the screw and spring on the back of the machine using a phillip screwdriver.

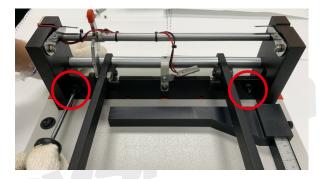

6.1.5 Remove two screws on sides of the knife using a phillip screwdriver.



6.1.6 Pull out the old blade from the machine carefully and put it aside but with special attention. (1) Caution: Sharp blade!

# 6. Maintenance (Continued)

#### 6.1 Blade Replacement - continued

① Warning: do not reach beneath the blade and clamp!




6.1.7 Take off the blade cover from the new blade.

(1) Caution: Sharp blade!



6.1.9 Cover the old blade with the blade cover carefully.

① Caution: Sharp blade!

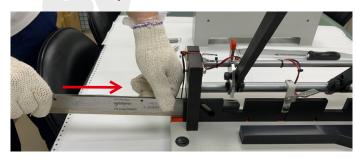

6.1.8 Use both hands to insert the new blade into the machine carefully.

#### 6.2 Cutting Stick Replacement

Switch off the ⑤ Cutting line switch.

Make sure the 1 Handle is locked.

Take out the current ④ Cutting stick from the left side of the machine and turn it to another side or insert a new one.

Note: Cutting sticks can be used repeatedly by turning to different surfaces.

# 7. Troubleshooting

Sympton	Solution
Paper cannot be cut through.	The knife is blunt. Sharpen the knife or replace a new knife.
Cutting line is weak or no cutting line.	Replace two AA batteries.