


Cutting Blade Replacement

! Warning: Sharp blade.

Before you replace the blade, read the below manual carefully.

Use the Blade Replacement Tool included in the machine package to change the blade.

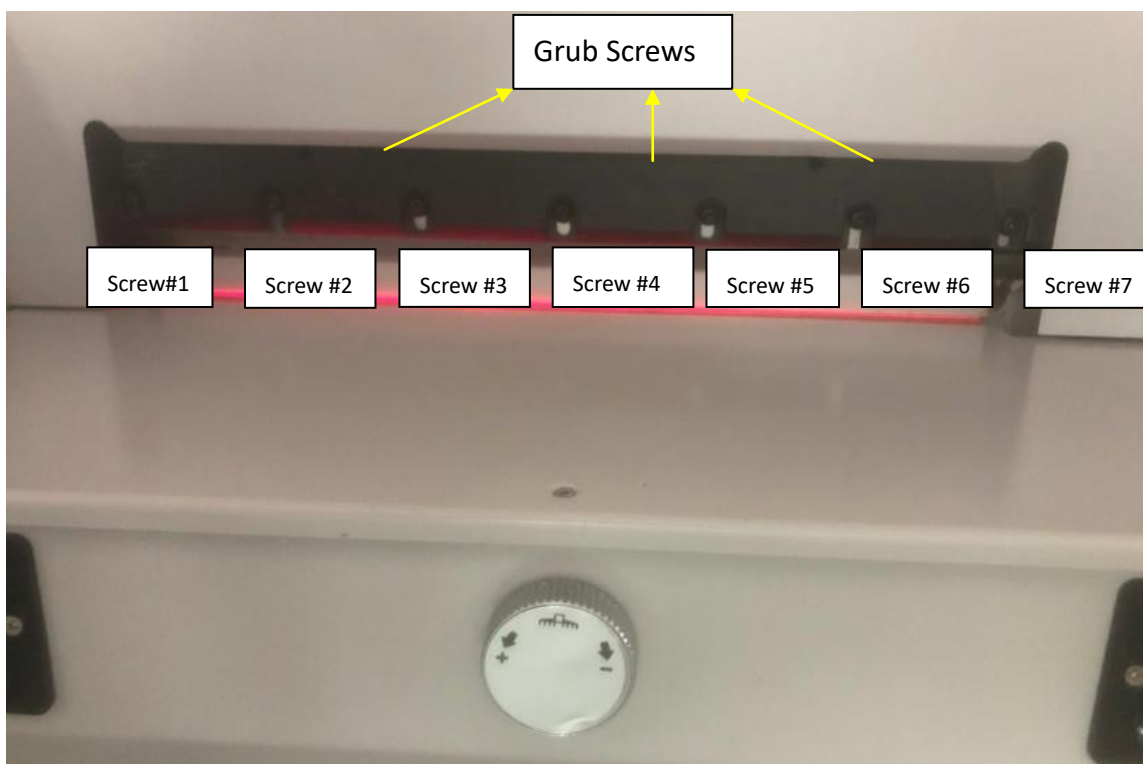

- 1.1 Use 2-hand cutting button to bring the blade down. Release the left hand as soon as the blade cut into the stick then switch off machine.
- 1.2 Rotate the 3 grub screws counterclockwise to disengage it with blade.

- 1.3 Use 2-hand cutting button to bring the blade down. Release the left hand as soon as let far right #7-screw exposes then switch off machine.
- 1.4 Remove screw #7.
- 1.5 Remove the #2 and #6 two screws.
- 1.6 Screw blade replacement tools onto blade screw holes #2 and #6 tightly.
- 1.7 Remove screw #1, #3 and #5.
- 1.8 Loosen the blade replacement tools and remove the blade from blade carrier. **! Warning: Sharp blade.**
- 1.9 Install blade replacement tools onto the new blade mounting hole #2 and #6 half way in. **! Warning: Sharp blade.**
- 1.10 Install new blade onto blade carrier and fasten blade replacement tools.
- 1.11 Fasten screw #1, #3, #5 and #7 half way in.
- 1.12 Remove blade replacement tools.
- 1.13 Fasten screw #2 and #6 half way in.
- 1.14 Place 1 paper sheet covering the cutting stick.
- 1.15 Use 2-hand cutting button to bring the blade down. Release the left hand as soon as the blade cut into the paper then switch off machine.
- 1.16 Fasten screw #7 half way in.
- 1.17 Turn the 3 grub screw on the top of blade carrier clockwise to let the blade cut the paper through evenly.
- 1.18 Fasten #1, #2, #3, #4, #5, #6 and #7 screws tight and secure.
- 1.19 Switch on the machine.