

User Manual

P17-20W

Introduction

Please read this User Manual, as it contains information about the wonderful features of this Charging Trolley as well as some tips to make more enjoyable.

Important

Read this user manual carefully before you use the appliance. Save it for future reference.

Danger

Make sure the AC power section (plug/socket) does not get wet.

General


The appliance is applied to AC input voltage range: 100~120VAC.

Specification:


Model	P17-20W
Charging Ability	20pcs 14" Laptop
Input	100-240V,50/60H, MAX 15A&MAX 1500W
Slot Size	13.39×9.25×0.94"
Case Size	31.88×21.26×12.20"

Charge

1.Put the charging trolley on flat surface near an AC socket. Ensure the ventilation system not be covered.

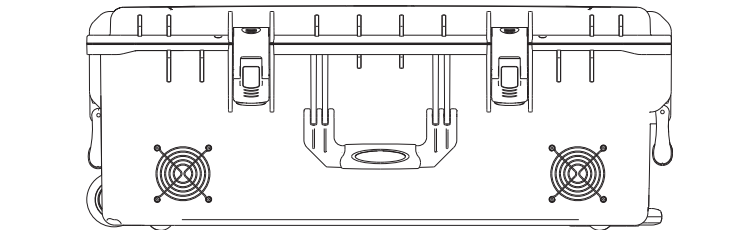

2.Open the charging trolley.

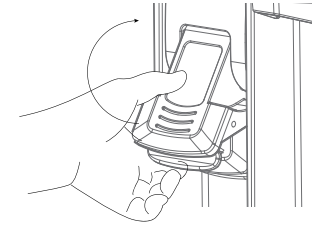

3.Put laptops into the inner compartments of trolley, connect PDU and laptops with the laptop chargers.

4.Insert the power cord plug into the external connector of charging trolley and connect the other end with AC socket.

5.Press "I" to turn on the power and charge laptop.



Extra Space and AC Sockets

1.Extra space to store router.

2.One AC sockets built inside to power up the router.

3.Independent switch to control inner AC sockets. Press "I" to turn on, press "O" to turn off.



Cleaning

Always unplug the charging trolley before you clean it.

Clean surface with a soft dry cloth.

Storage

Store charging trolley in the conditions of temperature -13°F~ 122°F and relative humidity 20-90% RH non-condensing.

Move and Transportation

1.Press "O" to turn off the power

2.Unplug the AC power cord and store it well.

3.Disconnect the AC adapters with laptops.

4.Close the charging trolley and lock latches.

Environment

Do not throw away the appliance as the normal household waste, but hand them in at an official collection point for recycling. By doing this, you help to preserve the environment.