 


VT-3A Dishwasher Operation Instruction

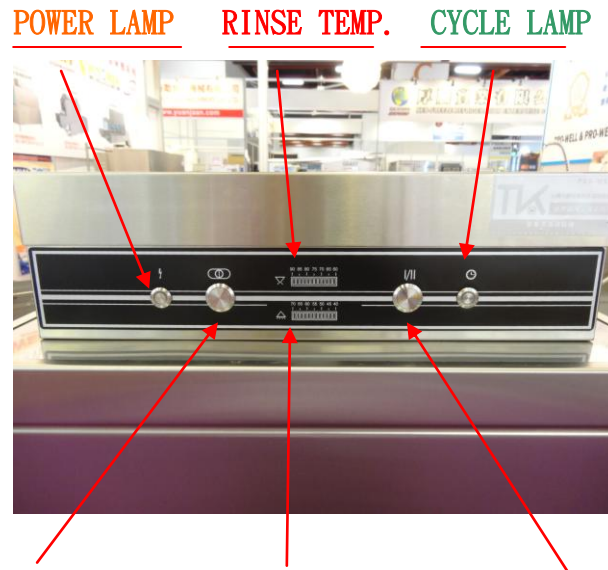

Function keys : (1) **ON/OFF POWER** **WASH TEMP.** (2) **CYCLE SELECT**

(1) **ON/OFF POWER:** Press the power switch, power light on, showing tank is filling and water is heating. ON/OFF POWER: Press again, power light off, indicates power shut down.

⊙ Wash tank temp display : When it shows 140 °F that means the washer start washing cycle.

⊙ Final rinse temp display : (When it shows 176 °F ↑ that means dishwasher can begin a final rinse cycle)

(2) **Wash cycle selected button** : When the button in flat shape, wash cycle time is 60seconds Wash cycle selected button : When the button in concave shape, wash time is 90 seconds

Startup :

1. Put the dishwasher machine trash basket & mesh cover into proper position and then place the drain pipe and close the door.

2. Press the ON/OFF key to begin the selected cycle, dishwasher start automatic waster filling. Water filling will be flow from booster to tank 2 or 3 times. Dishwasher will begin washing cycle after complete waster filling.

3. When wash temp display shows 140 °F ↑ and rinse temp display shows 176, °F it mean dishwasher begin wash and rinse cycle normally. When it reach to default temp, the LED display will turn from red to green.

4. Check that the washing Detergent and Rinse-drying are enough for next use and storage. Please call for supply when shortage.

5. This is a heightened and widened machine, so it can be used to wash baking pans, barrels, and baske



Cleaning

1. After cleaning the residue on the dishes and conducting the prewashing or soaking, sort bowls and dishes into rack in order and then insert into machine for washing.
2. Arrange the tableware to be washed on the rack. The tableware should be arranged with the rim of the bowl, the rim of the cup facing down, and the plate facing up. It is prohibited to overlap the plates.
3. Light turn on during washing process, and light turn off when complete wash cycle.
4. After the washing rack is full, push the rack into the dishwasher, and close the door to automatically start washing.
5. After finishing final rinse, take out cleaning Racks and load dirty Racks again.

Ending Procedures:

1. turn off on/off switch, and then the machine will stop running shut down the power.
2. Open inspection door, take out filter screen and discharge sewage, then take down and clean water-block screen. Check and search foreign objects inside tank and residue blocking up and down washing arm nozzle. If anything found, take out objects and disassemble washing arm to dredge nozzle
3. Pull out residual trash basket and strainer to clean away residue, and then reset them back
- 4 After cleaning, reset trash basket & mesh cover to right position and keep the inspect door open for drying

※To ensure cleaning effect, please change the water after 3-hour continuous washing or once a meal time※