

For American customer



L1, L2 and L3 are phase lines; L4 is N line; the other one is PE line.

Connect L3 and L4 together firstly.

If the operation panel doesn't work, change the connection and connect L2 and L4 together.