

OPERATION MANUAL

CARTON SEALER




Mechanical Dimensions: L950MM W810MM H1430

Table Height: 540-750MM

Width of tape used: 48-75MM

Weight: 138KG

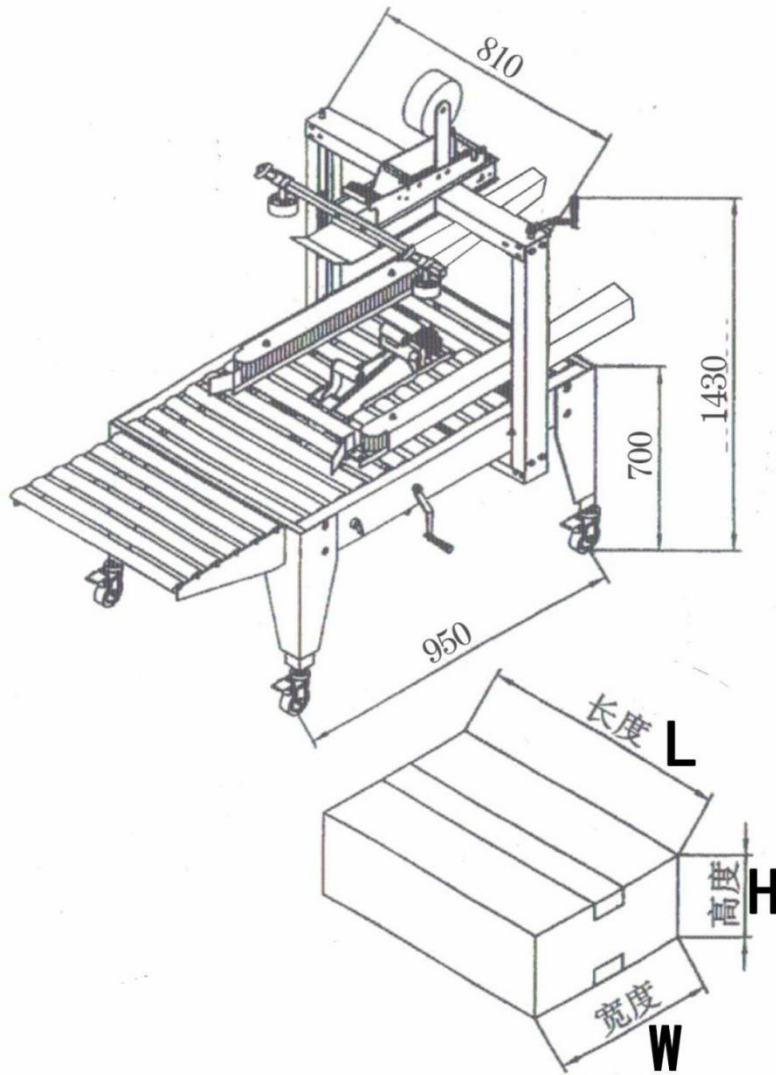


NO	W	H	tape	weight
FXJ4030	80-300 MM	90-400 MM	35-50MM	120KG
FXJ5050	120-500MM	130-500MM	35-50MM	130KG
FXJ6050	180-500MM	130-600MM	48-75MM	138KG

Carton Size:



Caster and height adjustment

1. It is recommended to adjust to the right height before use
2. Adjust the height of the machine as shown in the figure
3. Loosen the screw, adjust the length of the foot rest and then tighten the screw

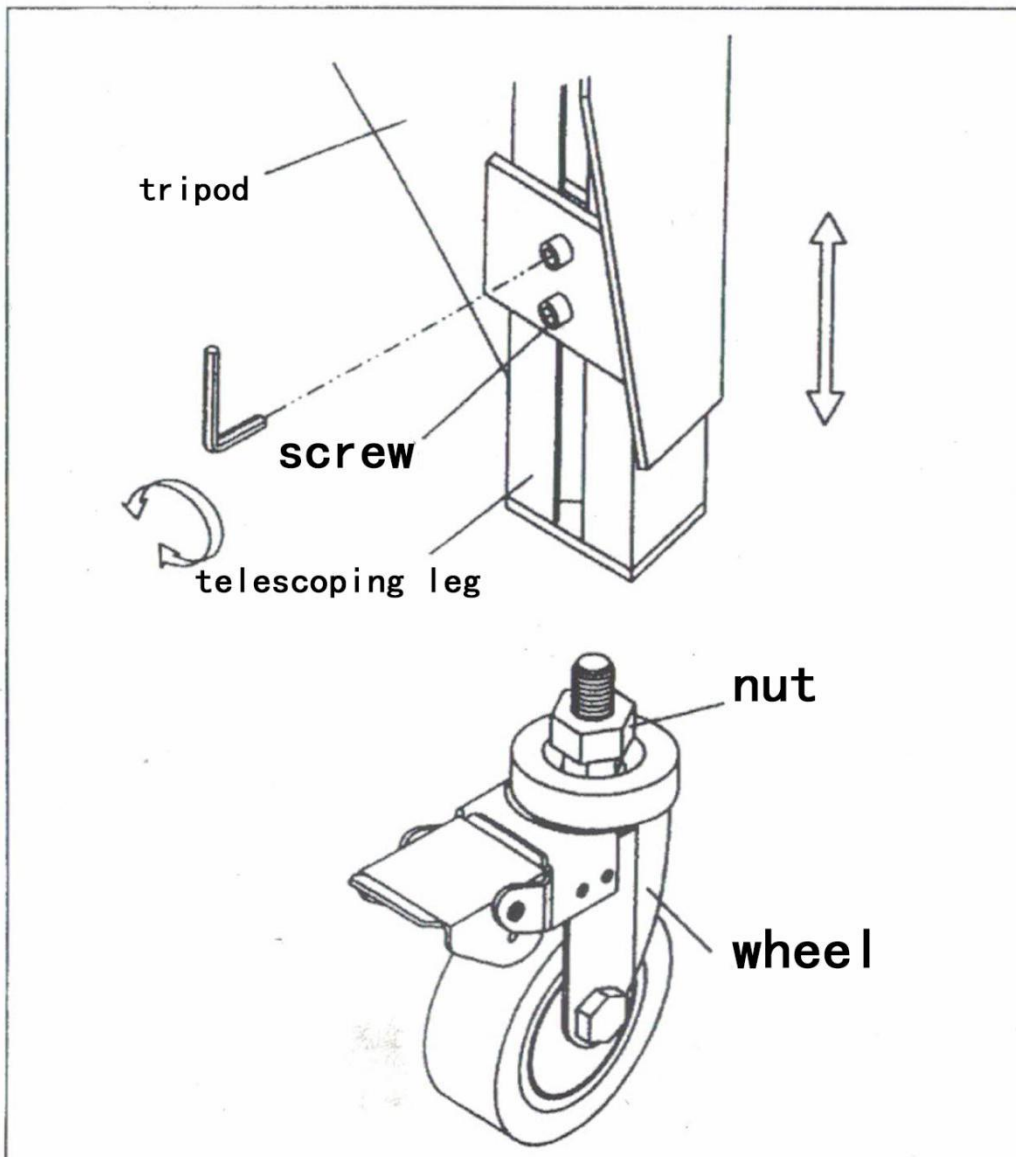


Platform installation

As shown in the figure: Place the platform close to the fuselage and tighten the screws

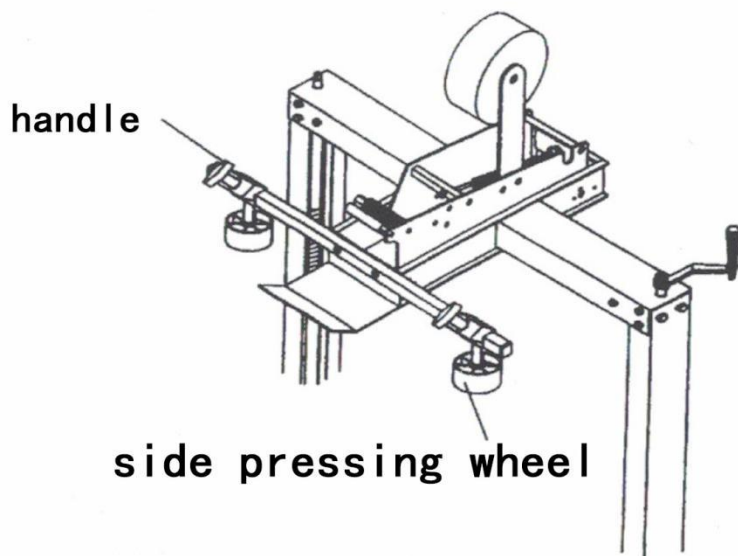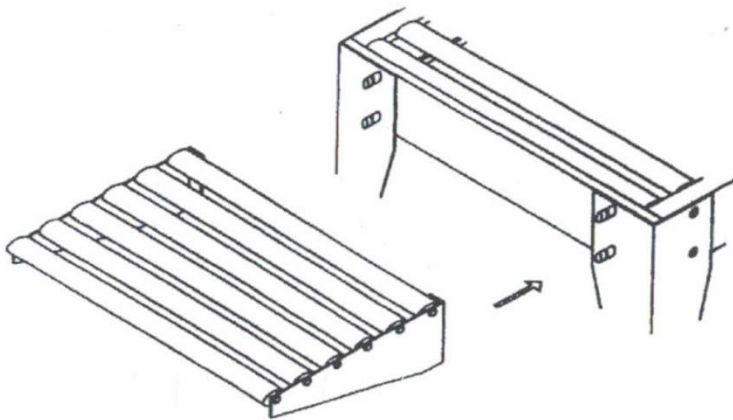


List of main components

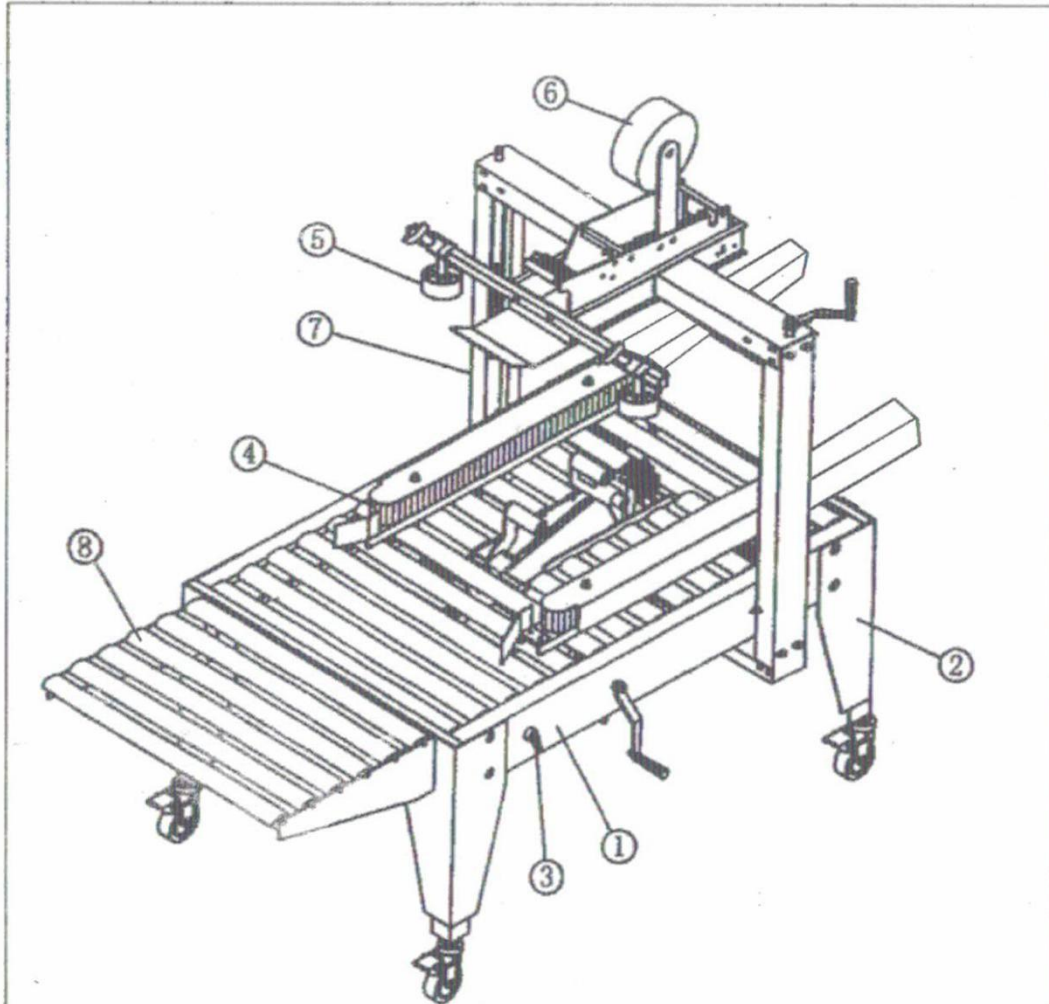


No	name	No	name
1	fuselage	6	adhesive tape
2	tripod	7	steel frame
3	power switch	8	platform
4	belt		
5	side pressing wheel		

Adjustment of width and height

1. A. Adjust the side pressing wheel to the carton side
2. B. Handle to adjust carton width
3. C. Handle to adjust carton height

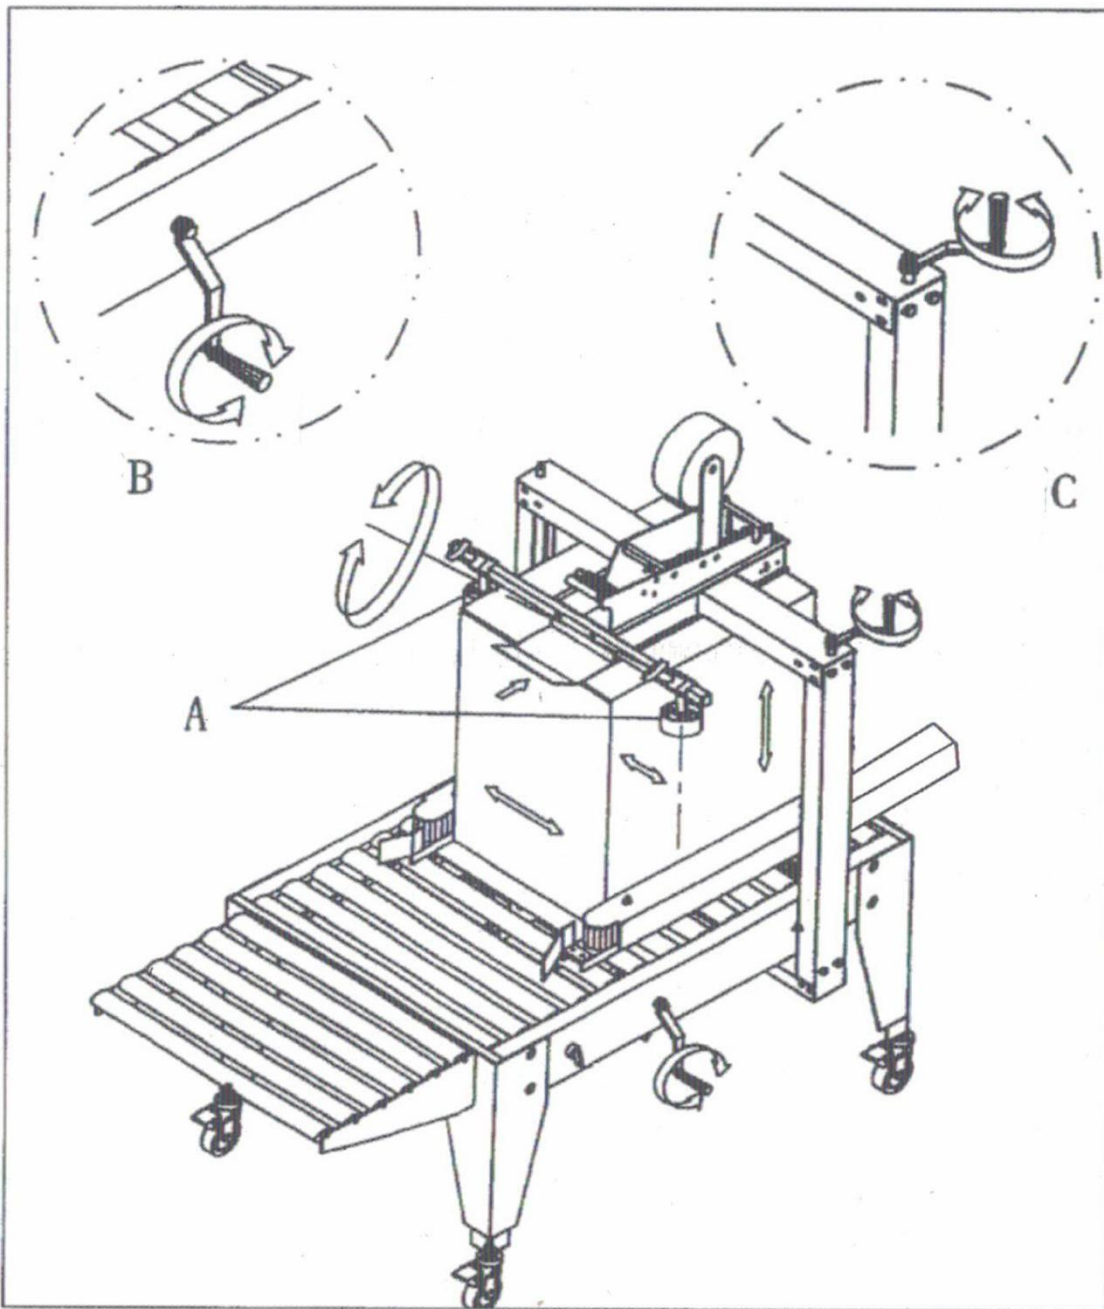


Viscose chart

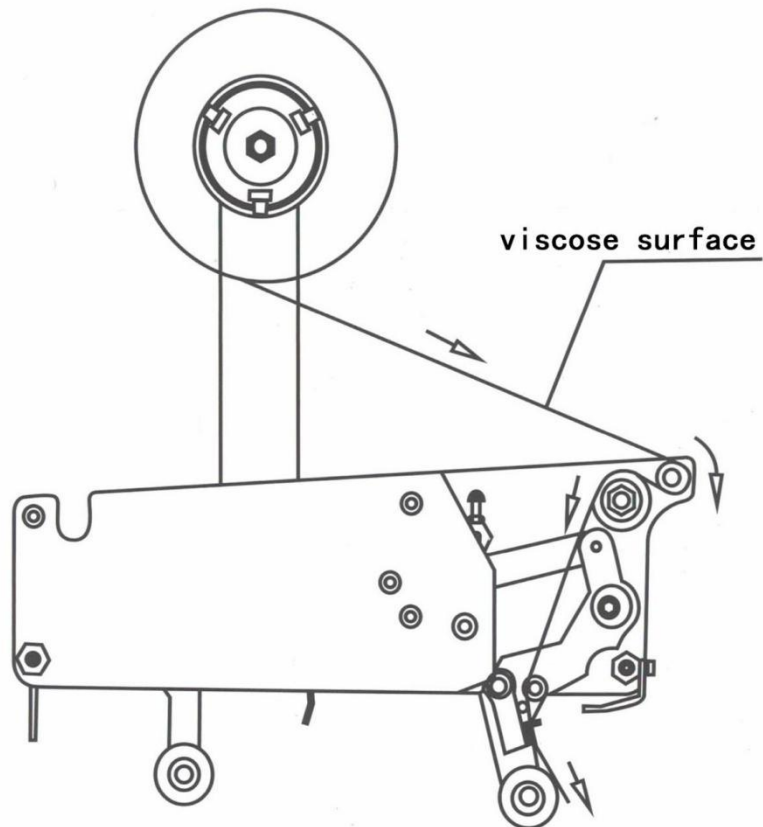


Glue position adjustment


Adjust the adhesive left and right as shown in the figure

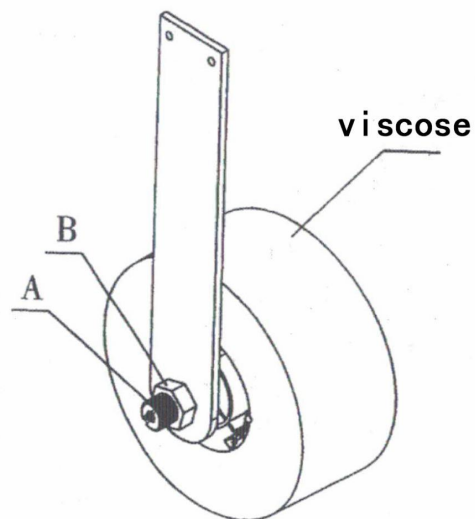


operation process

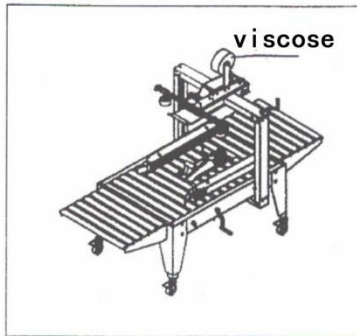

viscose installation

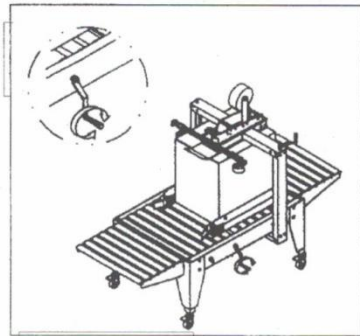


adjust left and right width

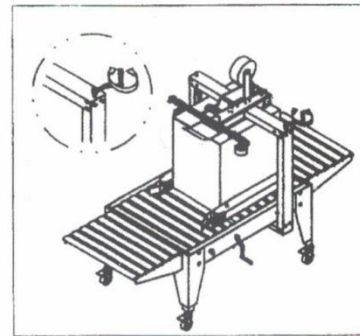

adjust altitude



adjust the pressure wheel position

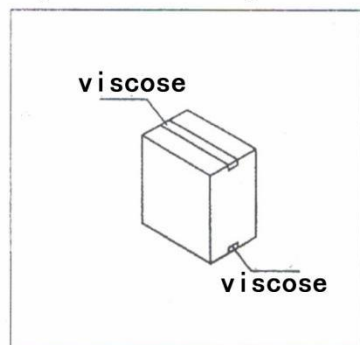

Circuit diagram

