








Instruction

Accessories list				
Desiccant 1PC	Bolts 4PC	Batteries 4PC	Carpet 1PC	Emergency key 2PC
				


● HOW TO OPEN THE SAFE

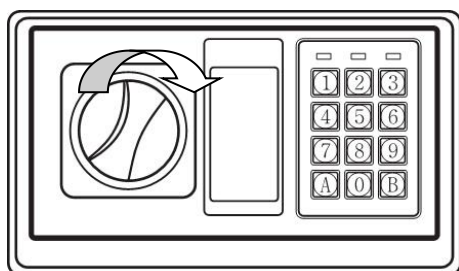

Step1: Take off the cover, then insert the emergency key and turn to the left. 

Step2: Turn the knob to the right, then open the door.

● HOW TO SET USER CODE

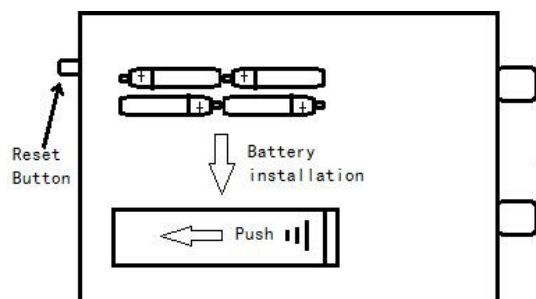


Step1: When door is open, open the battery compartment, and insert batteries.

Step2: push the Reset button. You can input user code (from 3-8 digits) within 15 seconds. Then press “A” or “B” to confirm it.

Step3: with the door open, press “0” two times, then press the reset button and input your master code (3—8 digits). Press “A” or “B” to confirm it.

● INSTALLING THE SAFE

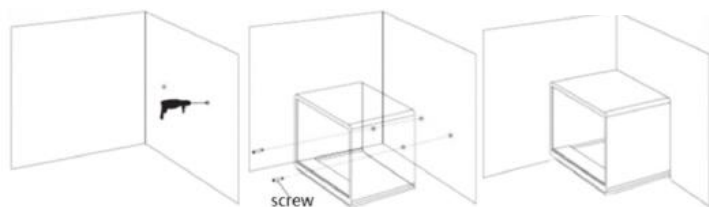

Step1: Place safe against the wall

Step2: Mark where holes need to be drilled.

Step3: Drill holes.

Step4: Place expansion bolts in holes.

Step5: Align holes in safe with expansion bolts on wall. Place screws and tighten.

● NOTE

PLEASE DO NOT LEAVE YOUR EMERGENCY KEY IN YOUR SAFE