


Instructions of Manual Heat Press Machine GS-SD8010-3

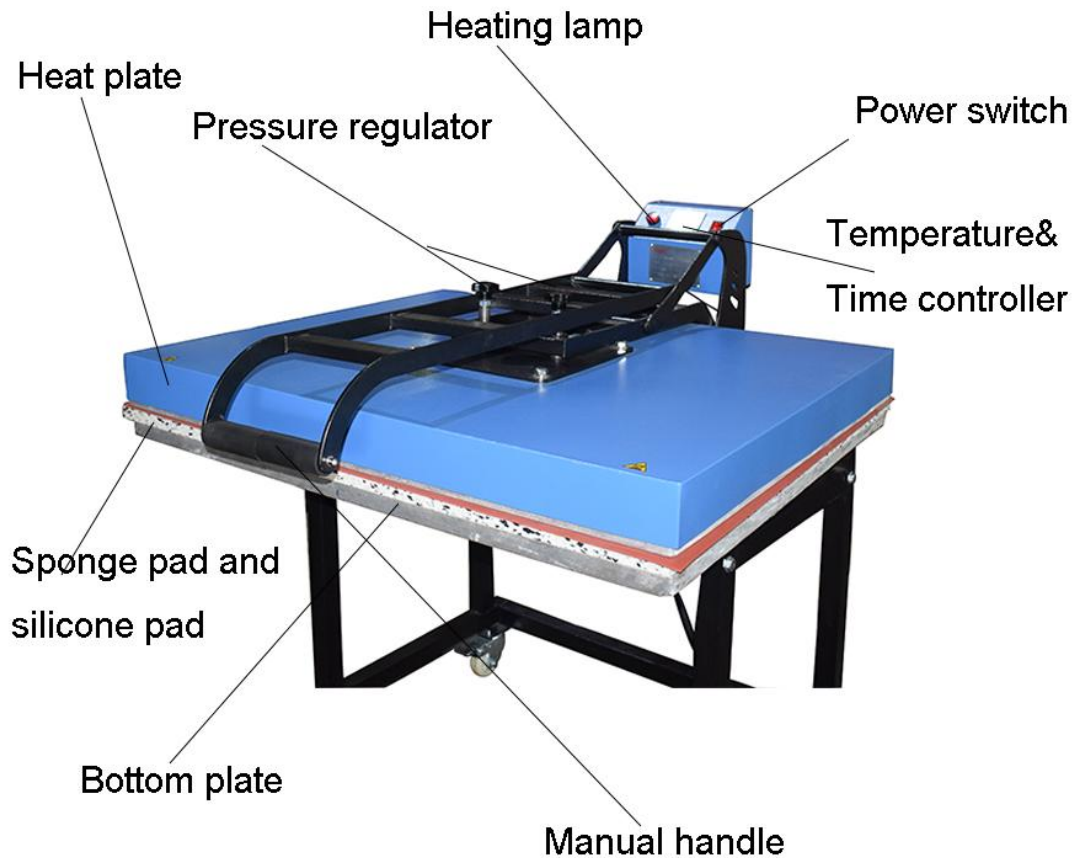

Technical parameters

Power : 6.8KW

Current: 31 amps

Voltage: 220V-1 phase 60HZ

Temperature range : 0-750°C

Time temperature : 0-999S

Printing area : 31.5*39 inches

Pressure: 0-114 Psi

Main usage

This machine can transfer patterns onto fabrics like cotton, linen, chemical fabric through heat transfer technology. Heat treatment of Silk screen printing ,glue, foam printing can also be achieved by this machine. Color code, portrait photo, landscape pictures and other patters also can be removed onto vitrolite and metal plate which is especially suitable for making medals, commemorative card, portrait of the deceased, T-shirt with signs. Its great virtue is economic and practical .

Product features

We use digital displaying thermostatic controller which provides high accuracy($\pm 2^{\circ}\text{C}$) with fine adjustment switch .

Heating tube and heating board are integrated into one with advantage of safety, durability, and well-distributed thermal .

This machine has the function of Automatic maintaining constant temperature and free pressure regulation with dependable capability.

We use digital timer which complete the work according to the signal instructions .

Heat-resisting silicone pad sit on the bottom plate which can withstand high temperature up to 400°C .

Operating steps

Step 1: Connect the power cord to the air switch .

Step 2 : turn on the power switch .

Step 3: Preset the needed time and temperature (See the details on the time and temperature setting page)

Step 4: After setting the temperature and time, wait for the machine to heat up.

Step 5 : When heating is done, the green light automatically flashing. You need to get things which need to printed prepared .

Step 6: Put the substrate on the silicon pad .

Step 7 : Push down the handle to flatten the substrate first ,then put on transfer paper and high temp-resistance cloth .Push down the handle again ,the heat-pressing process will begin .

Step 8 : When the process is over ,the buzzer will go off .

Step 9 : Take out the substrate. If the sublimating paper requires to be removed at lower temperature, please remove it after 5 to 10 seconds, if not, please remove it as soon as the process is done.

Time and temperature setting

1. Press the SET bottom to set temperature, when the numbers of the under line flash and the up line shows 'SV', press ▲ or ▼ to set the required temperature and then press the SET bottom again to confirm .
2. Press ◀ key to set time, when the numbers of the under line flash and the up line shows 'ST', press ▲ or ▼ to set the required time. Then press ◀ key to go back to work . Control panel will show the actual temperature and setting time after few seconds .

Maintenance

Pressure: if the pressure is not enough or too much, you can adjust the pentagram-shaped pressure regulator back the machine.

Clockwise is for increasing pressure and counterclockwise is for decreasing pressure. It is better not to use great strength to push the handle. Please do not use force over 20 kg in case of twisting the handle.

Time: If the transfer time arrivals, but the buzzer does not ring or stop ring, then you need to check the micro-switches point of contact inside the tail box to see if it is moderate .If not, it should be adjust to the appropriate position.

Temperature:

when the time's up ,the indicator lamp of the thermostat will light and the indicator will show the selected temperature .(temperature difference is about 5 °C, temperature up to 180 °C requires about 15 minutes) if heating plate does not heat, please check the circuit.

Notice

This machine must connect reliable ground wire .

This machine should be used in cool, dry place as the capacity of control instrument may be influenced in humid conditions.

The heat-pressing process requires coordination of proper amounts of time, temperature and pressure. The thickness and material of the cloth and the varieties of the sublimation paper all affect the result of the printing . It is suggested to print a sample first before mass production.

Temperature and time requirements of different materials (only for reference)

Pure cotton: 180-220 °C, 25sec

Polyester: 180°C, 15sec

Pearl board: 180°C, 120-180sec

Metal pendant: 180°C, 60sec

Mouse pad: 180°C, 15sec

Vitrolite: 220°C, 180sec

Key ring pendant: 180°C, 100sec
Ceramics: 180-220°C, 180sec

Time and Temperature settings

1. Temperature setting: press the “SET” button, then the numbers on the lower line blink, temperature-setting mode starts. You can press ▲ and ▼ to adjust the temperature, press and hold the “SET” button for 2 seconds to confirm the setting.
2. Time setting: press the increase and decrease button to set time. The letter “H” stands for “hour”, “M” for “minute”, and “S” for “second”.

After-sale service :

If the machine damages or breaks down due to improper installation, improper maintenance or transporting damage. We'll provide maintaining and technical guidance, charge at accessory cost price.

